VARFREE

KONDENZÁCIÓS GÁZKAZÁN 40, 60, 80, 100 vagy 120 kW modulációs gázégővel földgáz vagy propángáz üzem









Document No. 00RNO0182-# / 18.03.2017

Beépítési és karbantartási kézikönyv



Hungary

Nagytarcsa, Ipari park

Ganz Ábrahám utca 1/5



Tartalomjegyzék

1.	FIGYELMEZTETÉSEK ÉS JAVASLATOK	5
	1.1. Szállítás és tárolás	5
	1.2. Szimbólumok jelentése	5
	1.3. A beépítésre, karbantartásra és használatra képesített személyek	5
	1.4. Biztonsági intézkedések	6
	1.5. Víz jellemzők	6
2.	JÓVÁHAGYÁSOK	9
	2.1. Megfelelőség az európai irányelveknek	9
	2.2. Telepítési feltételek	9
	1.6. Gáz típusok	9
	1.7. Gáz nyomás	
3.	TECHNIKAI LEÍRÁSOK	11
	3.1. Méretek	11
	3.2. Kazán tartozékok	
	3.3. Égési jellemzők 15°C-on és 1013 mbar-on	
	3.4. A használat feltételei	17
	3.5. Elektromos csatlakozás	17
4.	TELEPÍTÉS	
	4.1. A kazán telepítése	
	4.2. Előlap levétele/felvétele	19
	4.3. Kémény csatlakoztatása	
	4.4. Gáz csatlakoztatás	
	4.5. Gáz változtatás (G20 ról G31 re, csak 40 kW-tót 100 kW-ig)	
	4.6. Víz csatlakoztatása	
	4.7. Elektromos csatlakozás	
5.	ELSŐ HASZNÁLAT	36
	5.1. Első használat elötti ellenőrzés	
	5.2. Első használat	
6.	ÜZEMBEHELYEZÉS UTÁNI VIZSGÁLAT	
	6.1. Kondenzátum eltávolítás	
	6.2. Gázellátás	
7.	KARBANTARTÁSI MŰVELETEK	
	7.1. Kazán karbantartás	
	7.2. Éves ellenőrzés	
8	A KÉSZÜL ÉK MEGSEMMÍSÉTÉSE	41

9.	HYDRAULIS DIAGRAMMOK ÉS KONFIGURÁCIÓK	
-	9.1. Diagrammok kiválasztása	
	9.2. A használt jelek a diagrammban	
	9.3. Diagrammok listája	
10	. TARTALÉK ALKATRÉSZ JEGYZÉK	104
11.	. EGYÉNI PARAMÉTEREK TÁBLÁZATA	112
12	. FÜGGELÉK	128

1. FIGYELMEZTETÉSEK ÉS JAVASLATOK

KÉRJÜK GONDOSAN OLVASSA EL A KÉSZÜLÉK BEÜZEMELÉSE ELŐTT, A KARBANTARTÁSRA ÉS KAZÁN HASZNÁLATRA VONATKOZÓ RÉSZT. FONTOS BIZTONSÁGI INFORMÁCIÓKAT TARTALMAZ.

1.1. Szállítás és raktározás

A kazánt:

- tárolni csak függőleges helyzetben, -20°C és +55°C környezeti hőmérséklet között és 5% - 95% relatív páratartalom között szabad
- egymásra nem pakolható,
- nedvességtől védeni kell.

1.2. A dokumentumban használt szimbolumok jelentése.



1.3. A képesített személy aki telepítheti, beüzemelheti, használhatja és karbantarthatja a készüléket

A kazán telepítésést, beüzemelését és karbantartásást csak az erre képesített személy végezheti, aki megfelel a helyi és nemzetközi szabályoknak is. Ezek a munkák megköveteleik, hogy a kazán burkolat le legyen szerelve. Alapvető műveletek elvégezhetőek a burkolat leszerelés nélkül is.

1.4. Biztonsági utasítások

	 Mindig kapcsolja le a kazánt és zárja el a gáz főelzárót mielött bármilyen munkát végezne a készüléken. Minden kazánon végzett munka után ellenőrizze, hogy nincs e gázszivárgás a készülékben.
VESZÉLY:	 Ha gázszagot érez: Nyilt láng használata tilos, ne dohányozzon és ne kapcsoljon fel semmilyen elektromos készüléket. Zárja el a gázcsapot. Szellőztessen. Keresse meg a szivárgást és javítsa ki.
VESZÉLY:	Ha füstöt észlel: • Kapcsolja le a kazánt. • Szellőztessen. • Keresse meg a szivárgás helyét és javítsa ki.
VESZÉLY:	A kazánokat mindig csatlakoztatni kell az elektromos rendszer földeléséhez (zöld sárga kábellel), az erre kialakított speciális csavar segítségével. Bármilyen munka ami ennek a megbontásával jár azután mindig csatlakoztassa újra a csavarhoz a kábelt.

1.5. Víz jellemzők

A kazán teljes élettartama alatt az alábbi előírásokat be kell tartani.



1.5.1. A hidraulikus rendszer előkészítése a kazán üzembe helyezése előtt.

Minden beszerelés előtt a víz csatlakozásokat alaposan ki kell takarítani. A tisztítás célja, hogy a szennyeződéseket és a baktériumokat eltávolítsa a rendszerből, ami megbetegedést okozna.

Új beszereléskor különösen figyelni kell a maradék zsír, fém oxid és réz részecskék eltávolítására.

Felújított készülékeknél figyelni kell a lerakódott iszap és korróziós szennyeződések eltávolítására.

Kétféle módszer létezik az iszap eltávolítására: az első nagy intenzitású gyors tisztítás ami pár órát vesz igénybe, a második egy lassabb fokozatos tisztítás ami több hétig is eltarthat. Az első fajta tisztítást még a kazán beszerelése előtt el kell végezni, a második egy szűrő beépítésével végezhető el. A tisztítás növeli a készülék teljesítményét, csökkenti az energiafogyasztását, és csökkenti a korrozió okozta meghibásodások előfordulását. A tisztítást minden esetben el kell végeznie a szakembernek.

1.5.2. A készülék védelme

A víz természetesen módon tartalmaz oldott kálcium ionokat és karbonátokat, ezek kálcium-karbonátokat alkothatnak. A készülékben a vízkőkiválást megakadályozandó mindíg, <5,6°nK keménységű vízzel töltse fel a rendszert.

Ha a kazán működése közben vizet kell tölteni a rendszerre, akkor az mindíg növeli a rendszerben oldott ásványok mennyiségét. A rátöltés soha nem lehet több mint a teljes rendszer háromszorosa. Az utántöltött víz keménysége mindíg <2,8°nK.

Ha nem tartja be ezeket az irányelveket akkor nagymennyiségű iszap és vízkő képződhet a rendszerben, amely a rendszer teljes takarításához vezethet.

A működéshez ezek a további óvintézkedések szükségesek:

- Ha a készülékhez vízlágyító van szerelve, a berendezést rendszeresen ellenőrizni kell, biztosítani kell hogy mindíg megfelelő keménységű vizet töltsön a rendszerbe.
- A vízkő lerakódást elkerülése érdekében a berendezést alacsony teljesítményen kell üzembe helyezni, a kazánszivattyút maximális fordulaton járatva.
- Ha túl magas a csapvíz keménységi foka akkor vízkezelésre van szükség.
- A készüléken végzett munka során csak annyira ürítse le a rendszert amennyire szükséges, és ne jobban.

1.5.3. Acél és rozsdamentes részek védelme a korrózió ellen

A kazánokban és a fűtési rendszerben, a korrózió nagy mértékű lehet ha a vízbe oldott oxigén kerül. Azoban ha nincsen folyamatosan oxigénnel kapcsolatban a rendszer akkor az első töltéskor belekerült oxigén hamar távozik a rendszerből.

Fontos követni azonban a beépítési és méretezési elveket, hogy elkerüljünk a folyamatos oxigén bekerülést a rendszerbe. Ezek a lépések a következőek:

- A készülékben hideg üzemben több mint 1 bar nyomásnak kell lennie.
- Távolítsuk el a nem jól tömítő szerelvényeket és használjuk megfelelően záró szerelvényt.

Ha a fent leírtak alapján jár el akkor a rendszernek hosszú távon

8,2 < pH < 9,5 értéket kell tartania és az oldott oxigénnek kevesebb mint 0,1 mg/liter alatt kell maradnia.

Ha fenn áll a veszélye annak, hogy oxigén kerül a rendszerbe akkor ajánlott oxigén megkötő berendezés használata (például nátrium-szulfid).

1.5.4. Egység ellenőrzés

Ha a fenti utasításokat követi új telepítés illetve felújítás közben akkor:

- ellenőrizze a pH értéket (stabil vagy enyhén növekvő)
- ellenőrizze a TH értéket (stabil vagy enyhén csökkenő)

Ellenőrizze ezeket az értékeket évente 2-3 alkalommal, ha eltérést vesz észre akkor kérje szakember segítségét a készülék épségének megóvás érdekében.

1.5.5. Lemezes hőcserélő beszerelése

Ha az előbb leírtakat nem lehet teljesíteni akkor a rendszer szét kell választani egy hőcserélővel, hogy a kazán megvédjük a korróziótól.

1.5.6. Szűrő beépítése a rendszerbe

Szűrő beépítése javasolt, hogy a lebegő részecskéket eltávolítsuk a rendszerből, ezzel védve a kazánt az eliszaposodástól.

2. JÓVÁHAGYÁSOK

2.1. Megfelelőség az európai irányelveknek

- Kis feszültségű termékek (2006/95/EC)

A készüléket nem használhatják, fizikai, érzékszervi vagy mentálisas sérült személyek. A készüléktől a gyerekeket távol kell tartani.

- Elektromágneses összeférhetőség (2004/108/CEE)

- Gázüzemű berendezések (2009/142/CE)

- Energiacímkézés (2010/30/EU):

A 811/2013 rendelet szerint a 70 kW alatti készülékek besorolásában ezek a készülékek "A" osztályúak.

- Környezetbarát tervezés (2009/125/EC):

A 813/2013 rendelet szerint a 400 kW alatti kondenzációs kazánok besorolásában ezek a készülékek "A" osztályúak.

2.2. Beüzemelést szabályzó feltételek

A készüléket a jóváhagyott szakmai előírásnak megfelelően kell felszerelni.

1.6. Gáz kategóriák

A kazán a gyárban beszabályzásra kerül H gázra (G20) 20 mbar gáznyomáson.

A 4.4-es fejezetben leírtaknak megfeleően szakemberrel szükséges beszabályoztatni a készüléket ha más gáz szeretnénk használni.

INFORMÁCIÓ:

ÁCIÓ: Bármilyen külső beavatkozás a garancia elvesztéséhez vezet.

	Kategória					
VARFREE	AT - CH - CZ - GR - LT - PT - RO - SI - SK	DK - EE - FI - LV - NO - SE				
40 - 60 - 70 - 80 - 100 kW	II _{2H3P}	I _{2H}				
120 kW	I _{2H}	I _{2H}				

1.7. Gáznyomás értékek



INFORMATION: A gáznyomást a gázszelep bementei oldalán kell mérni.

	H G20 földgáz	G31 propán
Névleges nyomás (mbar)	20	37
Minimum nyomás (mbar)	17	25
Maximum nyomás (mbar)	25	45

3. TECHNIKAI LEÍRÁSOK

3.1. Méretek



1.ábra - Méretjellemzők

		MODELS							
		40 kW	60 kW	80 kW	100 kW	120 kW			
Α	(mm)			541					
В	(mm)	4	77	5	74	692			
С	(mm)			890					
D	(mm)		408						
E	(mm)		66,5						
F	(mm)		12,3						
G	(mm)			103,5					
н	(mm)			85,5					
I	(mm)	86							
J	(mm)			133					
L	(mm)			190					
М	(mm)			95					
N	(mm)	2	41		242,5				
0	(mm)	14	3,5		120				
Р	(mm)	8	36		111				
ØQ	Fűtési visszatérő csatlakozás			G 1"1/4					
ØR	Gáz csatlkozás			G 1"					
ØS	Fűtési előremenő csatlakozás			G 1"1/4					
ØТ	Biztonsági szelep csatlakozás	G 1/2" (female)							
ØU	Kondenzvíz elvezetés (mm)	24							
ø٧	Levegő csatlakozás (mm)	1	25		150				
ØW	Kémény csatlakozás (mm)	3	30		100				
	Szelep szög			16°					
Y	(mm)			45					

3.2. Kazán alkatrészek

- 1 Gázszelep
- 2 Ventillátor
- 3 Ionizációs elektroda
- 4 Gyújtó elektroda
- 5 Gyújtó transzformátor
- 6 Füstgáz hőmérséklet érzékelő
- 7 Légtelenítő szelep
- 8 Visszatérő vízhőmérséklet érzékelő
- 9 Fogyasztásmérő
- 10 Előremenő vízhőmérsékletmérő
- 11 Nyomás mérő szenzor
- 12 Visszacsapószelep
- 13 Kondenzvíz elvezetés csatlakoztatása

- 14 Felhasználói panel
- 15 NAVISTEM B3000 egység
- 16 Levegő nyomáskapcsoló
- 17 Biztonsági termosztát



figure 2 - Boiler components for 40 and 60 kW models

- 1 Gázszelep
- 2 Ventillátor
- 3 Ionizásciós elektroda
- 4 Gyújtó elektroda
- 5 Gyújtó transzformátor
- 6 Füstgáz hőmérséklet érzékelő
- 7 Légtelenítő szelep
- 8 Visszatérő hőmérséklet érzékelő
- 9 Fogyasztásmérő
- 10 Előremenő vízhőmérsékletmérő
- 11 Nyomás mérő szenzor
- 12 Visszacsapószelep
- 13 Kondenzvíz elvezetés csatlakoztatása
- 14 Felhasználói panel
- 15 NAVISTEM B3000 egység
- 16 Levegő nyomáskapcsoló
- 17 Biztonsági termosztát
- 18 CEM szűrő (VARFREE 120 kW)



° 🗆



12

13

14

17

U0561578-#

3.3. Égési jellemzők 15°C-on és 1013 mbar-on

3.3.1. G20 földgáz

			MODELS				
		-	40 kW	60 kW	80 kW	100 kW	120 kW
Névleges teljesítmény Pn (80/60°C)		kW	40,0	56,4	79,8	95,7	119,5
Névleges teljesítmény kond. P (50/30°	kW	43,0	61,0	87,5	104,5	129,5	
Minimum teljesítmény Pn (80/60°C)		kW	8,3	11,5	17,1	19,0	23,9
Névleges hőteljesítmény Qn		kW	41,2	58,0	82,3	98,5	123,0
Gyújtási hőteljesítmény Qall		kW	21,8	23,5	26,1	30,5	39,0
Minimum hőteljesítmény Qmin		kW	8,5	11,8	17,6	19,6	24,6
Gáz térfogatásram Pn	m³/h	4,4	6,1	8,7	10,4	13,0	
CO ₂ értékhatár		%		at Qmin: 8 at Qmax: 9	3,7 % < C0 9,1 % < C0	D ₂ < 8,9 % D ₂ < 9,3 %	
Füstgáz térfogatáram (80/60°C)	Qn Qall Qmin	g/s	18,4 9,8 3,8	26,0 10,5 5,3	36,9 11,7 7,7	44,1 13,7 8,8	55,1 17,5 11,0
Füstgáztérfogatáram (50/30°C)	Qn Qall Qmin	g/s	17,5 9,3 3,5	25,0 10,1 5,1	35,6 11,2 7,5	42,7 13,3 8,5	52,5 16,7 10,2
Füstgázhőmérséklet (80/60°C)	Qn Qall Qmin	°C	80 65 61	76 63 62	74 58 57	76 61 62	70 56 56
Füstgázhőmérséklet (50/30°C)	Qn Qall Qmin	°C	62 42 39	60 39 38	53 33 34	57 38 38	52 31 32
Füstgázelvezetés belső átmérő		mm	80	80	100	100	100
Maximálisfúvóka nyomás (B23P) (80/60°C)	Qn Qall Qmin	Ра	156 33 20	200 31 20	179 15 15	187 17 17	200 32 20
Maximális fúvóka nyomás (B23P) (50/30°C)	Qn Qall Qmin	Ра	122 27 20	174 27 20	149 14 14	159 17 17	200 31 20
Égési levegő térfogatáram Qn		m³/h	51,8	72,8	103,4	123,7	154,5
NOx osztály			6				
Füstgázelvezetés és levegő bevezetés csatlakozások			B23, B23P C13, C33, C53				

3.3.2. G31 Propán gáz

			MODELS			
			40 kW	60 kW	80 kW	100 kW
Névleges teljesítmény Pn (80/60°C)		kW	40,0	56,4	79,8	95,7
Névleges teljesítmény kond. P (50/30°C)			42,1	59,7	85,6	102,3
Minimum teljesítmény Pn (80/60°C)			8,3	11,5	31,9	33,5
Névleges hőteljesítmény Qn		kW	41,2	58,0	82,3	98,5
Gyújtási hőteljesítmény Qall		kW	21,8	18,0	32,9	34,5
Minimum hőteljesítmény Qmin			8,5	11,8	32,9	34,5
Gáz térfogatásram Pn			1,7	2,4	3,4	4,0
CO ₂ értékhatár	%	at Qn at Qm	nin : 9,9 % ax : 10,3 %	< CO ₂ < 1 6 < CO ₂ < 7	0,1 % 10,5 %	
Füstgáz térfogatáram (80/60°C)	Qn Qall Qmin	g/s	18,5 9,8 3,8	26,0 8,1 5,3	36,8 14,8 14,8	44,1 15,5 15,5
Füstgáztérfogatáram (50/30°C)	Qn Qall Qmin	g/s	18,3 9,6 3,7	25,7 7,9 5,2	35,3 14,6 14,6	44,0 15,3 15,3
Füstgázhőmérséklet (80/60°C)	Qn Qall Qmin	°C	81 66 62	78 64 63	73 60 60	75 60 60
Füstgázhőmérséklet (50/30°C)	Qn Qall Qmin	°C	65 44 40	60 42 40	52 34 34	56 34 34
Füstgázelvezetés belső átmérő		mm	80	80	100	100
Maximálisfúvóka nyomás (B23P) (80/60°C)	Qn Qall Qmin	Pa	126 29 20	200 19 19	150 24 24	138 20 20
Maximális fúvóka nyomás (B23P) (50/30°C)	Qn Qall Qmin	Ра	112 24 20	177 16 16	129 22 22	129 20 20
Égési levegő térfogatáram Qn		m³/h	51,8	73,0	103,5	123,9
NOx osztály			6			
Füstgázelvezetés és levegő bevezetés csatlakozások			B23, B23P C13, C33, C53			

3.4.	A használat feltételei							

		MODELS					
		40 kW	60 kW	80 kW	100 kW	120 kW	
Maximálsi indítási hőmérséklet	°C			85			
Biztonsági hőmérséklet	°C			105			
				4000			
	(bar)			(4)			
Minimum hidag nyamág				1000			
Minimum indeg hyomas	(bar)	(1)					
Névleges víz térfogatáram	m³/h	1,7	2,4	3,4	4,1	5,1	
Minimum víz térfogatáram	m³/h	1,4	1,9	2,7	3,3	4,1	
Víz térfogat	Ι	3,6	5	9	10,2	12,8	
Száraz súly	kg	50	60	90	95	100	
Helység hőmérséklet (min. / max.)	°C	5 / 45					
Működés közbeni relatív páratartalom	5% tól 95% ig						
Védelmi osztály		IP24D					
Maximális felszerelési magasság	m			2000			

3.5. Elektromos csatlakozás

		MODELS					
		40 kW	60 kW	80 kW	100 kW	120 kW	
Működési feszültség	V 230 V AC (+10% -15%), 50Hz						
Elektromos teljesítményfelvétel Qn (tartozékok nélkül)	W	68	138	141	160	206	
Elektromos teljesítményfelvétel Qn (tartozékok nélkül)	W	113	194	196	268	348	
Elektromos teljesítményfelvétel készenléti üzemmódban	W	3					
Érzélkelő kábelek maximális hossza	m	Külső hó Szobate	HN ómrséklet: rmosztát,	IW érzéke 40m (0.5 i 120m (1.5 érzékelő: 2	lő: 10 mm²) mm²) 200m 1.5 r	nm²	
Teljesítmény kiement	V	230V AC (+10%, -15%)					
	A	5 mA - 1A					

4. BEÉPÍTÉS



A kazánt ne terhelje a csatlakozásoksúlya (hidraulika, gáz, füstgázelvezetés)

4.1. Kazán telepítés

FONTOS:



A VARFREE kazánokat nem szabad olyan falra szerelni amely tűzveszélyes anyaggal van borítva (fa, műanyag, stb.)

Az égési levegőnek nem szabad klórt, ammóniát, fluort és alkáli anyagokat tartalmaznia. Ezek az anyagok megtalálhatóak az areoszolokban, festékekben, takarítószerekben, mosószerekben, ragasztókban, stb. Használjon zárt égésterű kialakítást amennyiben medencetérben, mododában, fodrász szalonban használja a készüléket, mivel ezeken a helyeken

megtalálhatóak ezek az anyagok.

A környező falaktól minimálisan elhagyott távolságokat az ábra mutatja meg.

These values cannot be substituted for the specific regulatory requirements.

	B23 / B23P		C13		C33		C53				
	40 kV 60	V és kW	80 k\	N tól 12	20 kW	40 kW és 60 kW	80 kW tól 120 kW	40 kW és 60 kW	80 kW tól 120 kW	40 kW és 60 kW	80 kW tól 120 kW
	ø80	ø125	ø110	ø125	ø160	ø80/125	ø100/150	ø80/125	ø100/150	ø80/80	ø100/100
H (mm)	280	360	310	430	450	290	350	140	170	510	570



A kazánt minden esetben vízszintesen kell elhelyezni (a tetőt referenciaként lehet használni)

FONTOS:

Az első és oldalsó burkolatot klipszek tartják, felszerelés elött mindig távolítsa el őket.

4.2. Panelek leszerelése



Húzza ki a burkolat alját

② Húzza ki a burkolat tetejét

Burkolat visszatétele fordított sorrendben történik.

4.3. Füstgáz elvezetés

A kivitelezésnek mindig meg kell felelnie az abban az adott országban érvényes előírásoknak ahol a készüléket telepítik.

A füstgáz elvezető csöveket olyan anyagokból kell készülnie amely ellenáll a működés során keletkezett kondenzátumnak és a 120 °C-ig terjedő füstgázhőmérsékletnek.

VARFREE kazánokhoz csatlakoztatható füstgázelvezetők:

- a B23 or B23P
- a C13, C33 or C53



FONTOS: A kazánnak nem szabad a füstgázelveztő súlyát tartani.

4.3.1. B23 as füstgázelvezetés

FONTOS:

FONTOS:

FONTOS:

B23 típusú csatlakozó:

Égési levegő a környezetből, a füstgázelvezetés a tetőn keresztül történik.



A kazán telepítési helyének rendelkeznie kell alacsony és magas szellőzési ponttal.

A VARF<u>REE 40 kW and 60 kW, kaz</u>ánokhoz Ø125 füstgázelvezető adapter használata szükséges (kód:040940).

A VARF<u>REE 80 kW to 120 kW, kazánokhoz</u> Ø160 füstgázelvezető adapter használata szükséges (kód: 041050)



Semmilyen körülmények között ne hagyja ki ezeket a tartozékokat. A kazán kimeneti oldalán a füstgáznyomás 0 Pa!

A VARFREE kazánok olyan magas hatásfokú kazánok, amelyek nagyon alacsony füstgázhőmérséklettel működnek. A vízszintes szakaszokban a kondenzvíz megrekedésének elkerülése érdekében 3°-os lejtést kell hagyni a kazán felé.



Ha több kazán is csatlakoztatva van egy füstgázelveztő rendszerhez akkor fontos méretezni a rendszert.

Ø duct	VARFREE	Accessory part number	Min. A (mm)	A (mm)
Ø 125	40 kW and 60 kW	040940	2090	310
Ø 160	80 kW to 120 kW	041050	2170	390



figure 6 - Sizing recommendations

4.3.2. B23P füstgázelvezetés

B23P típusú csatlakozás:

Égési levegő a kazán környezetéből, füstgázelvezetés a tetőn keresztül nyomás alatti füstelvezetéssel.

$\underline{\land}$	FONTOS:	A kazán telepítési helyének rendelkeznie kell alacsony és magas szellőzési ponttal.
$\underline{\land}$	FONTOS:	A kazán csatlakozásához minden esetben a gyári tartozékot kell használni.

FONTOS:

IMPORTANT:

Az égéstermék elvezető rendszert mindig a 3.3 as fejezetben leírtak alapján kell méretezni.

A füstgázelveztés kivitelezésétől függően ellenőrizni kell, hogy a kazán kiementén Qmin, Qall és Qn értékeke nem haladják e meg a táblázatban leírtakat.

A számításhoz 50/30 °C-os rendszert kell használni.

Ha több kazán is csatlakozik egy elvezetőben akkor ellenőrizze a következőket.

- <u>Egy kazán Qmin és a többi Qmax:</u> A kimeneti nyomásnak alacsonyabbnak kell lennie Qmin, a 3.3 fejezetben megadott nyomásnál.
- Egy kazán Qall és a többi Qmax: A kimeneti nyomásnak alacsonyabbnak kell lennie Qmin, a 3.3 fejezetben megadott nyomásnál.
 - <u>Minden kazán Qmax:</u> A kimeneti nyomásnak alacsonyabbnak kell lennie mint a 3.3 fejezeten megadott nyomásnak.

Ø duct	VARFREE	Accessory part number	Min. A (mm)	A (mm)
Ø 80	40 kW és 60 kW	040945 (contains part ②) *	2000	220
Ø 110	80 kW tól 120 kW	041052 (contains part ②) *	2040	260
G 405	40 kW és 60 kW	040940 (contains parts ①+②) *	2090	310
Ø 125 80 kW tól 120 kW		041051 (contains parts ①+②) *	2155	375
Ø 160	80 kW tól 120 kW	041050 (contains parts ①+②) *	2170	390



FONTOS:

A füstgázelvezetőnek műszaki dokumentációval kell rendelkeznie.

A 80 as kéményadapter tartozék (kód 040945) egy Ø80, 500 mm hosszú egynes, amely a kivánt hosszra vágható (195 mm min).

A 110 (code 041052), Ø 125 (codes 040940 és 041051) és Ø 160 (code 041050) kéményadaptereket nem lehet vágni.

4.3.3. C13 és C33 füstgázelvezetés

WARNING:

C13 tipusú csatlakozó: Levegő bevezetés és füstgáz elvezetés vízszintesen.

C33 type connection: Levegő bevezetés és füstgáz elvezetés függőlegesen.

A vízsintes tartozék használata kötelező C13 és a függöleges tartozék használata C33 kialakításnál.



C 33

Az alábbi táblázat a rendelkezére álló tartozékokat mutatja a kazán típusokhoz.

			VARFREE				
			40 kW	60 kW	80 kW	100 kW	120 kW
C 12	C13		040	946		040987	
013	Ø csatlak	ozás	Koaxiális	80/125	Ko	axiális 100/15	0
	A min (n	nm)	19	48		1995	
		G20	15	10	10	10	8
		G31	15	8	10	10	
	C 33 fekete	!	040	947		040988	
C 33	C 33 okker		040	948			
	Ø csatlakozás		Koaxiális	80/125	Koaxiális 100/150		0
	A min (mm)		18	65		1890	
		G20	15	10	10	10	8
		G31	15	8	10	10	

Az Lmax hosszúság a C13 és a C33-as indító idom nélküli hosszúság.

A hosszaknál figyelembe kell venni a következő egyenértékeket is.

- 90° könyök = 1 m csőhossz

- 45° ív = 0.5 m csőhossz

3%-os lejtést használjon a vízszintes szakaszokban

A C13 as csatlakozáshoz 150mm -es lyukat kell csinálni a falba a 80/125 csőnek és 180 mm-es lyukat a 100/150 csőnek. A szellőzőnyílást poliurethán habbal helyezze a falra, hogy szükség esetén eltávolíthassa.

4.3.4. C53 füstgázelvezetés

C53 típusú csatlakozó:

Levegő bevezetés és füstgáz elvezetés két egymástól elkülönített csőben történik.



WARNING: A C53 as füstgáelvezetéshez az indító idom használata kötelező.

Az elérhető típusok

			VARFREE		
	40 kW	60 kW	80 kW	100 kW	120 kW
C53 fekete	040951			040999	
C53 okker	040952				



figure 9 - C53 type connection

				VARFREE		
		40 kW	60 kW	80 kW	100 kW	120 kW
Ø cs	atlakozás	Szétválasztott 80/80		Szétválasztott 100/100		
A min (mm)		2194		2240		
	Füstgáz (L1)	17	15	15	15	14
Max hosszak – (m)	Levegő (L2)	20	15	20	20	10
	Füstgáz (L1)	17	15	15	15	
(11)	Levegő (L2)	20	15	20	20	

A következő egyenértékekkel kell számolni:

- 90° könyök = 1 m csőhossz

 -45° ív = 0.5 m csőhossz

A vízszintes szakaszokban min 3%-os lejtést kell alkalmazni a kazán felé.

4.3.5. Kondenzátum elvezetés

A kondenzátum elvezetés 3 - 5 pH értékű ezért műanyag PVC csövet kell használni, minimum 32 mm es átmérőben.



FONTOS:

A kondenzátumot a helyi előírásnak megfelelően semlegesítsük.

4.4. Gáz csatlakozás

Mielőtt a kazánt csatlakoztatnák a gázhálózatra takarítsunk ki a csőböl minden nemű szennyeződést, mivel ezek bekerülése a kazánba élettartam csökkenéshez vezetne.

Az első beindítás elött ellenőrizze a gáznyomást.

A gázszelep gyárilag fel van szerelve egy 125 µm es szűrővel, de ez nem képes minden szennyeződést kiszürni, ezért ajánlott a kazán elé egy 50 µm es szűrő beéítése.

Mielőtt a kazánba gázt engedne győződjün meg rőla, hogy a csatlakozások megfelelőek és gázzáróak e.

4.5. Gázváltoztatás (G20 vagy G31, csak 40 kW tól 100 kW)

A VARFREE kazán gyárilag úgy lett beállítva, hogy H típusú (G20-as típusú) földgázzal működjön 20 mbar tápnyomással.



FONTOS:

A felhasznált gáz típusának megváltozásával járó műveletet sakképzett szakkember végezheti.

4.5.1. Prorán fuvóka beéítése

FONTOS:



CSAK a 80 kW és a 100 kW modellek.

Módosítsa a gáz típusát egy fúvókba beépítésvel a gázszelephez Zárja el a gázt és kapcsolja le a villamos Disconnect the electric cable and connect on the gas valve.

Lazítsa le a két anyát a gázszelep előtt és után és vegye le a gázszelepet.

Távolítsa el a négy csavart. Építse be a fúvókát Szerelje vissza a szelepet.



Propán fúvóka beépítése



4.5.2. A gyújtás, az előszellőztetés, a minimális és a maximális sebesség változása

Kapcsolja ki a kazánt (nézze meg a 3.3.1 NAVISTEM B3000 kazán kezelésit).

Ha szükséges nyoma meg ESC gombot a főképernyőre való visszatéréshez Nyissa meg a Beállítások/biztonsági beállítások menüt.

Állítsa be az előszellőztetés sebességét (9504), gyújtás sebességet (9512), minimális sebesség (9524) és maximum sebességet (9529)

Models	Gáz	9504	9512	9524	9529
40	G20	3380	3380	1780	6100
40	G31	3250	3250	1690	5900
60	G20	3130	3130	1920	7250
60	G31	2790	2470	1840	6900
70	G20	2450	2300	1760	5480
70	G31	2770	2770	2770	5330
90	G20	2450	2300	1760	6240
00	G31	2770	2770	2770	6100
100	G20	2750	2350	1750	6450
100	G31	2750	2550	2550	6250

4.5.3. A gázszelep beállítása





- -Begyújtás előtt állítsa be a gázszelep az értékeket az R1 es csavaron.
- Indítsa az égőt maximális teljesítményen
- Használjon gázvizsgáló műszert a CO2 értékek₂ beállításához.
- Ellenőrizze a CO2 értéket Qmax teljesítményen, ha nem megfelelő akkor az R1-es csavar segítségével állítsa be a megfelelő értékre.
- Ellenőrizze a CO2 értéket Qmin teljesítményen, ha nem megfelelő akkor az R2-es csavar segítségével állítsa be a megfelelő értékre..
- -Ha minimum értéken is beállította a készüléket akkor ellenőrízze újra a maximális teljesítményen mért értéket, ha szükséges állítson rajta újra.

A gáztípus megváltoztatása után ellenőrizze a gáztömörséget, és ragassza fel a készülékre a megfelelő gázt jelző matricát.

			Nyitott előbeállítás		Zárt előbeállítás	
Modell	Gáz	A beállítócsavar gyári állása	CO₂ Pmax	CO ₂ Pmin	CO₂ Pmax	CO ₂ Pmin
	G20		9,0 - 9,2	8,5 - 8,7	9,1 - 9,3	8,7 - 8,9
40 KVV		R1 csavar 2 és fél fordulat R2 csavar 1/8 fordulat	10,2 - 10,4	9,7 - 9,9	10,3 - 10,5	9,9 - 10,1

			Nyitott el	őbeállítás	Zárt előb	eállítás
Modell	Gáz	A beállító csavar gyári állása	CO ₂ Pmax	CO₂ Pmin	CO ₂ Pmax	CO₂ Pmin
00 1000	G20		9,0 - 9,2	8,6 - 8,8	9,1 - 9,3	8,7 - 8,9
60 KVV	G31	R1 csavar 3 és 3/4 fordulat R2 csavar 1/4 fordulat	10,2 - 10,4	9,8 - 10,0	10,3 - 10,5	9,9 - 10,1
	G20		9,0 - 9,2	8,5 - 8,7	9,1 - 9,3	8,7 - 8,9
80 KVV	G31	R1 csavar 1/4 fordulat R2 csavar 1/4 fordulat	10,2 - 10,4	9,7 - 9,9	10,3 - 10,5	9,9 - 10,1
100 100/	G20		9,0 - 9,2	8,5 - 8,7	9,1 - 9,3	8,7 - 8,9
100 kW ·	G31	R1 csavar nem kell állítani R2 csavar 1/8 fordulat	10,2 - 10,4	9,7 - 9,9	10,3 - 10,5	9,9 - 10,1

4.6. Hidraulikus csatlakozás





A kazánokban a következő tartozékok vannak

- egy visszacsapószelep
- egy leeresztőszelep,
- egy áramláskapcsoló

A kazánokba a következő kiegészítőket kell mindenképpen beszerelni

- Elzáró szerelvények
- Tágulási tartály
- 4bar-os biztonsági szelep
- egy szűrőt a visszatérő ágba



Első feltöltés előtt:

A csőhálózatot űrítse le teljesen,

- a leürítő csap legyen nyitva
- · a biztonsági szelep legyen nyitva

Leeresztés közben hagyja őket nyitva.

Feltöltés közben:

- Ellenőrízze a nyomást, amely meleg állapotban maximálisan 4 bar, hideg állapotban legalább 1 bar legyen
- Ellenőrizze, hogy teljesen feltöltődött a rendszer, és nincs nyoma vízfolyásnak.

Kondenzvíz elvezetés:

A kondenzvíz elvezetéshez használjon minimum 32mm átmérőjű PVC csövet, mivel a kondenzátum erősen savas kémhatású (pH=3 - 5). A vízszintes szakaszokban minimum 3% lejtést kell használni.



A kondenzátumokat mindig az érvényben lévő helyi jogszabályoknak megfelelően kell elvezetni.

4.7. Elektromos csatlakozás

VESZÉLY:	A kazánon végzett minden munka előtt kapcsolja le az elektromos hálózatról.
FONTOS:	A kazánt mindíg csatlakoztassa az épület földelő hálózatához. Az elektromos bekötést mindíg kétpólusú kismegszakítóval kell bekötni. Ajánlott 30mA-es életvédelmi relé használata.
	További elektromos bekötések miatt olvassa el a NAVISTEM B3000 telepítési útmutatóját.

4.7.1. Vezérlő panel



Távolítsa el a kazán elülső panelját, hogy hozzáférjen a kezelőpanelhez.

A panel a kazán jobb alsó részén található.

Lazítsa meg az "A" csavarokatnegyed fordulattal, és billentse előre

A panel burkolatát két gomb biztosítja ("B").

4.7.2. Kábelátvezetés



A kábelek kivezetésére használja a kazán alján található tömszelencéket.

4.7.3. Kapcsolási rajz



4.7.4. NAVISTEM B3000 Csatlakozás

Olvassa el a NAVISTEM B3000 kezelési útmutatóját.

4.7.5. Kazán Keringető Szivattyú Csatlakozása

4.7.5.1. YGNIS által szállított tartozék

Ha a keringető szivattyút az YGNIS szállítja kérjük olvassa el a vonatkozó telepítési útmutatót.

4.7.5.2. <u>A kivitelező által biztosított kiegészí</u>tők

A keringető szivattyút a B3000 panelról vezérlejük (max 1A.) Ez a kiement akkor aktív ha a hőigénykérés folyamatban van.

<u>Ha a keringető szivattyúnak nincs vezérlő kapcsolója:</u>

A keringető szivattyút kapcsolja közvetlenül a QX3 csatlakozóhoz. Ha a szivattyú több mint 1A-t fogyaszt!

Ha a szivattyú száraz kontktussal van szerelve be/ki kapcsolás: A szivattyú tápellátását az elektromos szekrényből lehet megoldani. Használja a QX3 kimenetet a relé vezérléséhez.

4.7.6. OCI 345 csatlakoztatása

Az OCI 345 használatához olvassa el a tartozékokkal ellátott kézikönyvet.

4.7.7. AGU 2.550 használata

Az AGU 2.550 használatához olvassa el a kezelési kézikönvyet.

4.7.8. Biztosítékok

A kazánok négy biztosítékkal vannak szerelve a kazánvezérlőn. A kazánban 3 tartalék biztosíték is van.

5. ELSŐ BEKAPCSOLÁS

5.1. Ellenőrizze bekapcsolás előtt

Ellenőrizze hogy a hideg nyomás 1bar felett legyen. Felújítás esetén győzödjön meg róla, hogy a régi csővezetékből a szennyződések a lehető legjobban el legyenek távolítva.

Ellenőrizze a kémény csatlakozását típustól függően. Ellenőrizze a gáz típusát és nyomását.

VESZÉLY:	Glikolos víz használata tilos!
FONTOS:	B23 és B23P esetén a tartozékok használata kötelező!

5.2. Első használat

Végezze el az alábbi műveleteket:

- 1. Kapcsolja be a főmegszakítót:
- 2. Kérjen hőigényt a NAVISTEM B3000 vezérlőn keresztül.
- Az égő indítása után ellenőrizze a gázvezeték tömörségét. Ellenőrizze a füstgáz összetételét.
- 4. Állítsa be a kazánt a kívánt paramétereknek megfelelően.



FONTOS:

Minden lezárt alkatrészen végzett munka a garancia elvesztéséhez vezet.
6. ÜZEMBEHELYEZÉS UTÁNI VIZSGÁLATOK

6.1. Kondenzátum elvezetés

Ellenőrizze hogy a kondenzátum elvezetés, hogy minden esetben megfelelően történjen.

6.2. Gáz bekötés

Ellenőrizze, hogy a gázvezeték megfelelő méretű:

Ha a kazánház főmegszakítót lekapcsolja, a mágneses gázszelepnek le kell záródnia és teljesen meg kell állítania a kazánokat.

Ha a főmegszakítót újra felkapcsoljuk, a kazánoknak automatikusan újra kell indulniuk.

7. KARBANTARTÁSI MŰVELETEK

Karbantartási munkákat csak szakképzett személy végezhet.

Mielőtt a karbantartást elkezdené:

- Kapcsolja el a kazánházi főbiztosítékot.
- Zárja el a gázcsapot.
- •Zárja ki a kazánt a hidraulikai körből.

Hőcserélő tiszítítás (részletek a következő fejezetben)

Ellenőrizze a csöveket.

Tisztítsa meg a csöveket.

Gyújtó és lonizációs elektróda (részletek a következő fejezetben)

Ellenőrizze a gyújtóelektróda résszélességét, és az ionizációs elektróda alakját

Ha szükséges cserélje az alkatrészeket.

Kondenzvíz elvezető

Tisztítsa ki a kondenzvíz szifont, és ellenőrizze a csövezetéket, hogy ne legyene benne dugulás.

Ellenőrizze a gázszelepet és a légnyomáskapcsolót. Ellenőrizze a csatlakozó vezetéket.

Ellenőrizze az égéstermék összetételét.

7.1. A kazán leengedése

- A kazánt hidraulikusan leválasztjuk a rendszerről.
- · Csökkentse a nyomást a légtelenítő szelepnél,
- Nyissa ki a leeresztő szelepet,

7.2. Éves ellenőrzés

- Kapcsolja le a kazánt az elektromos hálózatról
- ·Zárja el a gázszelepet,
- Szerelje le az előlapot.

VESZÉLY:

A kazán vízoldalán végzett munkák közben védje az elektromos csatlakozásokat, a fröccsenő víz ellen.



- · Válaszzuk le a gázcsövet,
- Válasszuk le az elektródákat, a ventillátorról a levegő bevezetést és a levegő nyomáskapcsolót,
- · Csavarja le az ajtót tartó M6 anyákat,
- Távolítsuk el az egőcsövet az összes szerelvénnyel együtt.
- Ha az égéskamrában bármilyen szennyeződés van azt egy nem fémes kefével távolítsa el, aztán proszívózza ki. Ne használjon savas vagy lugos terméket
- Ha a tűzálló szigetelés bármelyik helyen sérült akkor azt ki kell cserélni.







- Ellenőrizze az elektródákat, az aluminium oxid lerakódások helyeit. Ha az elektródák és a tömítések sérültek cserélje ki őket.
- Tisztítsa ki a szifont és ellenőrizze hogy a kondenzvíz megfelelően átfolyik-e rajta.
- Szerelje be az égőt és húzza meg az M6-os anyákat.
 A maximális nyomaték max 5 Nm.
- Csatlakoztassa a gázcsövet.
- Ellenőrizze hogy a rendszer megfelelően tömített.
- Csatlakoztassa a vezérlőpanelt.
- Kapcsolja fel az elektromos tápellátást.
- Indítsa el a kazánt és ellenőrizze a füstgáz összetételét, hogy az előzőekben leírt értékekenek megfeleljen.
- Szerelje fela burkolatokat.

8. A KÉSZÜLÉK MEGSEMMÍSÍTÉSE

A termék teljesen újrahasznosítható, amivel megakadályozható a környezetkárosítás.

- a) A termék ártalmatlanításához akkreditált hulladékkezelő céget kell megbízni.
- b) A hulladék ártalmatlanításáról további kérdésben forduljon a Hu.Ray Kft-hez.

9. HIDRAULIKAI DIAGRAMMOK ÉS KONFIGURÁCIÓK

9.1. Kiválasztási diagrammok



9.2. Használt szimbolumok

Szimbolum	Funkció
\square	Nyitott elzárószelep
$\overline{\mathbb{X}}^{\mathbb{Z}}$	Motoros elzárószelep
\mathbb{M}	Szűrő
450 470	Biztosnsági szelep
气	lszapleválasztó
- The The The The The The The The The The	Külső érzékelő

Szimbolum	Funkicó
Ā	Szabályzó szelep
	Motoros 3 járatú szelep
\subseteq	Visszacsapó szelep
	Szivattyú
Ŷ	Légtelenítő
٩	Hőmérséklet érzékelő

SINGLE BOILER Másodlagos hálózatok vezérlése nélkül 0...10V vagy LPB

Diagramm VF1

page 1/4

A. HYDRAULIC DIAGRAM



A fűtőkört a kazán szabályzója vezérli, LPB buszon keresztül kapja a szükséges információkat, amiket az OCI 345 továbbit a központi B3000 egység felé.

B. Szabályozáshoz szükséges tartozékok

	Menny.	Termék név	Cikk szám
LPB kommunikáció	1	OCI 345	059572

page 2 / 4

1

C. Ajánlott hiraulikai tartozékok

		Cikkszám
Hidraulikai kit egy kazánhoz	VARFREE 40 kW és 60 kW	082324
	VARFREE 80 kW és 100 kW	082325
	VARFREE 120 kW	082326

D. Elektromos bekötés



E. Különleges indítás

Indítsa el a kazánt.

Csatlakoztassa a tartozékokat.

• Konfigurációs menü

S Végezze el az alábbi beállításokat:

Diagram: VF1

Az YGNIS álltal szállított kazánszivattyú	Ninncs szükség korrekcióra	
Az ügyfél álltal beszerelet kazánszivattyú	Relé kimenet QX3 (5892)	Kazánszivattyú Q1
 Idő és dátum menü 		
ldőbeállítás	Hours / minutes (1)	HH.MM
Dátumbeállítás Év beállítás	Day / month (2)	DD.MM
010V-os bemenet beállítás		
 Configurációs menü 		
H1 bement	Function input H1 (5950)	Consumer request VK1 10V
	Voltage value 1 H1 (5953)	0.0
	Function value 1 H1 (5954)	0
	Voltage value 2 H1 (5955)	10.0
	Function value 2 H1 (5956)	1000 (for equivalence 10 V = 100 °C)
Option: to keep the generator at a stop, even if the 010V signal is different from 0	Function input H5 (5977)	Inhibit starting (produces a fault E846)
For a request by LPB (LPB network menu)		
 LPB network menu 		
Check that the boiler is defined as the	Device address (6600)	1
master generator	Segment address (6601)	0
	Bus power supply function (6604)	Automatically
	Clock mode (6640)	Slave with remote setting
Configuration menu		
Save the sensors	Save sensors (6200)	Yes (switches back to no automatically)

Sorszám Érték

page 4 / 4

F. ELECTRICAL AND HYDRAULIC VALIDATION

For a request via 010V input	Line No.	Value
 Inputs/outputs test menu 		
Voltage in H1	Voltage signal H1 (7840)	To be validated with the voltage sent by the boiler room's PLC
Direction of switch H5	Contact state H5 (7865)	Open / Closed
For a request via LPB		
If the boiler room's regulator is configured as maste the date and time.	r clock, it must retrieve	
In both cases		
 Inputs/outputs test menu 		
Alarm relay	Relay test (7700)	Relay output QX1
Boiler pump control, if supplied by customer	Relay test (7700)	Relay output QX3
Reset the outputs	Relay test (7700)	No test
Configuration menu		
Check the hydraulic diagram Chec	k no. heat source 1 (6212)	14
Chec	k no. heat source 2 (6213)	0
Che	ck no. storage tank (6215)	0
Check	no. heating circuits (6217)	0

G. CONFIGURATION OPTIMISATION

Maintenance optimisation

A maintenance message may be generated that does not set the boiler to fault. This maintenance message may be displayed after the following 3 counters have expired:

- Time since last maintenance (or commissioning): set parameter 7044 to 12 months.
- Operating hours of the burner (parameter 7040).
- Number of starts (parameter 7042)

These last 2 parameters are dependent on the boiler's hydraulic installation. We recommend using at least parameter 7044 for annual maintenance.

SINGLE BOILER Control 1 direct circuit with low limit and production of DWH

Diagram VF2

page 1 / 6

A. HYDRAULIC DIAGRAM



figure 23 - VF2 diagram

The boiler operates in variable flow temperature according to the outdoor temperature measured by the exterior sensor QAC 34.

The heating water law is programmed on the NAVISTEM B3000, with or without a low temperature limit and with a weekly programme.

The production of domestic hot water is controlled by the NAVISTEM B3000 using the QAZ 35 sensor in the tank.

B. REGULATION ACCESSORY REQUIRED

	Quantity	Appliance reference	Order No.
Output sensor kit	1	QAC 34	059260
DHW sensor kit	1	QAZ 36	059261
Boiler pump supplied by the customer (all-or-nothing control) Extension module kit (delivered with a network sensor QAD 36)	1	AGU 2.550	059753

page 2 / 6

C. RECOMMENDED HYDRAULIC ACCESSORY

		Order No.
Hydraulic kit for boiler only	for VARFREE 40 kW and 60 kW kW for VARFREE 80 kW and 100 kW for VARFREE 120 kW	082324 082325 082326

D. CUSTOMER'S ELECTRICAL CONNECTION



page 3 / 6

Boiler pump supplied by the customer (all-or-nothing control):



E. SPECIFIC START-UP PROCEDURE

- \bigcirc Make the accessories' electrical connections.
- Start up the boiler only.
- Gry out the adjustments below.

	Line No.	Value
 Time and date menu 		
Set the time	Hours / minutes (1)	HH.MM
Set the date	Day / month (2)	DD.MM
Set the year	Year (3)	YYYY
 Configuration menu 		
Start up heating circuit 1	Heating circuit 1 (5710)	On
Configure the alarm output	Relay output QX1 (5890)	Alarm output K10
Configure DHW pump Q3	Relay output QX2 (5891)	DHW ctrl elem Q3
Configure the direct circuit pump Q2	Relay output QX3 (5892)	Heat circuit pump HC1 Q2
Boiler pump supplied by YGNIS:		
	No adjustments necessary	

Diagram: VF	2	page 4 / 6
	Line No.	Value
Boiler pump supplied by the customer (a	all-or-nothing control)	
Configure the extension module function	Function extension module 1 (6020)	Multifunctional
Configure the output to control the boiler pump	Relay output QX23 module 1 (6032)	Boiler pump Q1
Heating circuit 1 menu		
Adjust the comfort setting	Comfort setpoint (710)	
Adjust the curve slope	Heating curve slope (720)	
Adjust the min. flow temperature if necessary	Flow temp setpoint min (740)	60°C (adjust according to the lower limit)
 Switch the heating regime to permanent com 	ıfort	桊
 Domestic hot water menu 		
Adjust the comfort setting	Nominal setpoint (1610)	
Activate the DHW mode		-
Configuration menu		
Save the sensors	Save sensors (6200)	Yes (switches back to no automatically)
E. ELECTRICAL AND HYDRAULIC VAL	IDATION	
 Inputs/outputs test menu 		
Check the outputs		
Alarm relay	Relay test (7700)	Relay output QX1
DHW pump Q3	Relay test (7700)	Relay output QX2
Direct circuit pump Q2	Relay test (7700)	Relay output QX3
Boiler pump control, if supplied b customer	Py Relay test (7700)	Relay output QX23 module 1
Reset the outputs	Relay test (7700)	No test

Check the sensor values

External sensor B9

DHW sensor B3

Outside temp B9 (7730)in °CDHW temp B3/B38 (7750)in °C

|--|

 Configuration menu 		
Check the hydraulic diagram	Check no. heat source 1 (6212)	14
	Check no. heat source 2 (6213)	0
	Check no. storage tank (6215)	4
	Check no. heating circuits (6217)	2
F. CONFIGURATION OPTIMISATION		
Heating circuit optimisation:		
 Heating circuit 1 menu 		
Adjust the reduced setting	Reduced setpoint (712)	
 Heating circuit 1 timer programme menu 		
Preselection	Preselection (500)	
Adjust the timer programming	On / off phases (501506)	
 Heating circuit 1 holiday menu 		
Preselection	Preselection (641)	
Adjust the timer programming	On / off phases (642643)	
 Switch the heating regime to automatic 		Auto
DHW optimisation:		
 Domestic hot water menu 		
Adjust the reduced setting	Reduced setpoint (1612)	
Adjust the DHW release mode	Release (1620)	Time program 4/DHW
 Timer programme 4/DHW menu 		
Preselection	Preselection (560)	
Adjust the timer programming	On / off phases (561566)	
• DHW tank menu		
Adjust the over value	Flow setpoint boost (5020)	

Value

Line No.

Diagram: VF2		page 6 / 6
	Line No.	Value
 Domestic hot water menu 		
Configure a Legionnella function	Legionella function (1640)	
	Legionella funct periodically (1641)	
	Legionella funct weekday (1642)	
	Legionella funct setpoint (1645)	
	Legionella funct duration (1646)	

Maintenance optimisation

A maintenance message may be generated that does not set the boiler to fault. This maintenance message may be displayed after the following 3 counters have expired:

- Time since last maintenance (or commissioning): set parameter 7044 to 12 months.
- Operating hours of the burner (parameter 7040).
- Number of starts (parameter 7042)

These last 2 parameters are dependent on the boiler's hydraulic installation. We recommend using at least parameter 7044 for annual maintenance.

SINGLE BOILER 2 regulated circuits, 1 direct circuit with low limit and production of DWH

Diagram VF3

page 1 / 7

A. HYDRAULIC DIAGRAM



figure 24 - VF3 diagram

The water law of the heating circuit is programmed on the NAVISTEM B3000 with a weekly heating programme.

The AGU 2.550 interfaces built into the boiler are used to control the two three-way regulating valves of the heating networks.

The boiler operates in variable flow temperature according to the outdoor temperature measured by the exterior sensor QAC 34, without a low temperature limit.

The production of domestic hot water is controlled by the NAVISTEM B3000 using the QAZ 36 sensor in the tank.

B. REGULATION ACCESSORY REQUIRED

	Quantity	Appliance reference	Order No.
Extension module kit (delivered with a network sensor QAD 36)	2	AGU 2.550	059753
DHW sensor kit	1	QAZ 36	059261
Output sensor kit	1	QAC 34	059260
Room sensor kit	1	QAA 75	040954

page 2 / 7

C. RECOMMENDED HYDRAULIC ACCESSORY

		Order No.
Hydraulic kit for boiler only	for VARFREE 40 kW and 60 kW	082324
	for VARFREE 80 kW and 100 kW	082325
	for VARFREE 120 kW	082326

D. CUSTOMER'S ELECTRICAL CONNECTION





E. SPECIFIC START-UP PROCEDURE

Make the accessories' electrical connections..



 Time and date menu 		
Set the time	Hours / minutes (1)	HH.MM
Set the date	Day / month (2)	DD.MM
Set the year	Year (3)	YYYY
 Configuration menu 		
Start up heating circuit 1	Heating circuit 1 (5710)	On
Start up heating circuit 2	Heating circuit 2 (5715)	On
Start up heating circuit 3	Heating circuit 3 (5721)	On

Diagram: VF3		page 4 / 7
	Line No.	Value
Configure the boiler pump or alarm report		
YGNIS supply		
Configure the alarm output	Relay output QX1 (5890)	Alarm output K10
Customer supply (all-or-nothing co	ntrol)	
Configure the output (no more alarm outputs available)	Relay output QX1 (5890)	Boiler pump Q1
Configure DHW pump	Relay output QX2 (5891)	DHW ctrl elem Q3
Configure the direct circuit pump Q2	Relay output QX3 (5892)	Heat circuit pump HC1 Q2
Configure the extension modules	Function extension module 1 (6020)	Heat circuit 2
	Function extension module 2 (6021)	Heat circuit 3
 Heating circuit 1 / 2 / 3 menu 		
For each circuit:		
Adjust the Comfort setpoint	Comfort setpoint (710/1010/1310)	
Adjust the curve slope	Heating curve slope (720/1020/1320)	
Adjust the min. flow temperature for heating circuit 1	Flow temp setpoint min (740)	60°C (adjust according to the lower limit)
Removal of the over-value	Mixing valve boost (830)	0 °C
 Switch the heating regime to permanent comf 	fort	桊
Domestic hot water menu		
Adjust the Comfort setpoint	Nominal setpoint (1610)	
Activate the DHW mode		
 Configuration menu 		
Save the sensors	Save sensors (6200)	Yes (switches back to no automatically)

page 5 / 7

F. ELECTRICAL AND HYDRAULIC VALIDATION

	Line No.	Value
 Inputs/outputs test menu 		
Check the outputs		
Boiler pump supplied by YGNIS		
Alarm relay	Relay test (7700)	Relay output QX1
Boiler pump supplied by the custome	er (all-or-nothing control)	
Boiler pump Q1	Relay test (7700)	Relay output QX1
DHW pump Q3	Relay test (7700)	Relay output QX2
Direct circuit pump Q2	Relay test (7700)	Relay output QX3
Heating circuit 2 3-channel valve opening	Relay test (7700)	Relay output QX21 module 1
Heating circuit 2 3-channel valve closure	Relay test (7700)	Relay output QX22 module 1
Heating circuit 2 pump	Relay test (7700)	Relay output QX23 module 1
Heating circuit 3 3-channel valve opening	Relay test (7700)	Relay output QX21 module 2
Heating circuit3 3-channel valve closure	Relay test (7700)	Relay output QX22 module 2
Heating circuit 3 pump	Relay test (7700)	Relay output QX23 module 2
Reset the outputs	Relay test (7700)	No test
Check the sensor values		
External sensor B9	Outside temp B9 (7730)	in °C
DHW sensor B3	DHW temp B3/B38 (7750)	in °C
B12 flow sensor	Sensor temp BX21 module 1 (7830)	in °C
B14 flow sensor	Sensor temp BX21 module 2 (7832)	in °C
Configuration menu		
Check the hydraulic diagram	Check no. heat source 1 (6212)	14
	Check no. heat source 2 (6213)	0
	Check no. storage tank (6215)	4
	Check no. heating circuits (6217)	30302

Page 58 / 130

page 6 / 7

G. CONFIGURATION OPTIMISATION

Heating circuit optimisation

	Line No.	Value
 Heating circuit 1 / 2 / 3 menu 		
Adjust the reduced setting	Reduced setpoint (712/1012/1312)	
 Heating circuit 2 / 3 menu 		
ECO function for automatic summer / winter switch (see NAVISTEM B3000 manual) <i>Function activated by default</i>	Summer/winter heating limit (1030/1330)	19 °C
Daily ECO function for automatic comfort / reduced switch according to the difference between the set point and the outdoor temperature (see NAVISTEM B3000 manual). <i>Function not activated by</i> <i>default</i>	24-hour heating limit (1032/1332)	-3 °C
Heating circuit 1 / 2 / 3 timer programm	e menu	
Preselection	Preselection (500/520/540)	
Adjust the timer programming	On / off phases (501506) (521526) (541546)	
 Heating circuit 1 / 2 / 3 holiday menu 		
Preselection	Preselection (641/651/661)	
Adjust the timer programming	On / off phases (642643) (652-653) (662-663)	

• Switch the heating regime to automatic

Auto

DHW optimisation:

DHW tank menu
 Adjust the over value
 Flow setpoint boost (5020)
 16 °C

Maintenance optimisation

A maintenance message may be generated that does not set the boiler to fault. This maintenance message may be displayed after the following 3 counters have expired:

- Time since last maintenance (or commissioning): set parameter 7044 to 12 months.
- Operating hours of the burner (parameter 7040).
- Number of starts (parameter 7042)

These last 2 parameters are dependent on the boiler's hydraulic installation. We recommend using at least parameter 7044 for annual maintenance.

H. CONFIGURING THE ROOM SENSOR

Connecting the sensor to the heating circuit:

	Line No.	Value
 User interface menu of the <u>room sensor</u> 		
Assign the heating circuit to the room sensor	Use (40)	Ambience appliance 2

The room sensor is used to configure the heating circuit. It adjusts parameter 1012 (heating circuit 2). Refer to the NAVISTEM B3000 manual for the other room sensor functions.

SINGLE BOILER 4 regulated circuits, with DHW production



page 1 / 8

A. HYDRAULIC DIAGRAM



figure 25 - VF4 diagram

The water law of the heating circuit is programmed on the NAVISTEM B3000 with a weekly heating programme.

The AGU 2.550 interfaces built into the boiler are used to control the two three-way regulating valves of the heating networks. The two others will be managed by the RVS 63 integrated into an outside case at the boiler.

The boiler operates in variable flow temperature according to the outdoor temperature measured by the exterior sensor QAC 34, without a low temperature limit.

The production of domestic hot water is controlled by the NAVISTEM B3000 using the QAZ 36 sensor in the tank.

B. REGULATION ACCESSORY REQUIRED

	Quantity	Appliance reference	Order No.
Heating circuit regulation kit	1	RVS 63	059516
Extension module kit (delivered with a network sensor QAD 36)	2	AGU 2.550	059753
Communication kit for LPB bus	1	OCI 345	059752
DHW sensor kit	1	QAZ 36	059261
Output sensor kit	1	QAC 34	059260

page 2 / 8

C. RECOMMENDED HYDRAULIC ACCESSORY

		Order No.
Hydraulic kit for boiler only	for VARFREE 40 kW and 60 kW	082324
	for VARFREE 80 kW and 100 kW	082325
	for VARFREE 120 kW	082326

D. SPECIFIC START-UP PROCEDURE





page 4 / 8

E. SPECIFIC START-UP PROCEDURE

Make the accessories' electrical connections.

IMPORTANT: Configure the switches on the AGU 2.550 extension modules.

- Start up the boiler only.
- Gry out the adjustments below.

On STRATTON MK2 boiler:

	Line No.	Value
 Time and date menu 		
Set the time	Hours / minutes (1)	HH.MM
Set the date	Day / month (2)	DD.MM
Set the year	Year (3)	YYYY
 Configuration menu 		
Start up heating circuit 1	Heating circuit 1 (5710)	On
Start up heating circuit 2	Heating circuit 2 (5715)	On
Configure the alarme report	Relay output OX1 (5890)	Alarm output K10
If the boiler pump is supplied by customer	Relay output QX3 (5892)	Boller pump Q I
Configure the extension modules	Function extension module 1 (6020)	Heat circuit 1
	Function extension module 2 (6021)	Heat circuit 2
LPB network menu		
Device number	Device address (6600)	1
Segment number	Segment address (6601)	0
Configure the bus supply	Bus power supply function (6604)	Automatically
Set the clock program	Clock mode (6640)	Master
Heating circuit 1 / 2		
Adjust the comfort setting	Comfort setpoint (710/1010)	
Adjust the curve slope	Heating curve slope (720/1020)	

Diagram: VF4		page 5 / 8
	Line No.	Value
 Domestic hot water menu 		
Adjust the comfort setting	Nominal setpoint (1610)	
Adjust the DHW release mode	Release (1620)	24h/day
Activate the DHW mode		-
 Configuration menu 		
Save the sensors	Save sensors (6200)	Yes (switches back to no automatically)
On RVS 63 :		
 Menu Configuration 		
Start heating circuit 1	Heating circuit 1 (5710)	On
Start heating circuit 2	Heating circuit 1 (5715)	On
Save the sensors	Save sensors (6200)	Yes (switches back to no automatically)
 LPB network menu 		
Device number	Device address (6600)	1
Segment number	Segment address (6601)	1
Configure the bus supply	Bus power supply function (6604)	Automatically
Set the clock program	Clock mode (6640)	Slave without remote setting
Heating circuit 1 / 2		
Adjust the comfort setting	Comfort setting temperature (710/1010)	
Adjust the curve slope	Heating curve slope (720/1020)	
		AZ.

Set the heating program to permanent comfort



page 6 / 8

..

....

F. ELECTRICAL AND HYDRAULIC VALIDATION

On STRATTON MK2 boiler:

	Line No.	value
 Inputs/outputs test menu 		
Check the outputs		
Alarm report	Relay test (7700)	Relay output QX1
DHW pump Q3	Relay test (7700)	Relay output QX2
Boiler pump control, if supplied by customer	Relay test (7700)	Relay output QX3
HC1 3-channel valve opening	Relay test (7700)	Relay output QX21 module 1
HC1 3-channel valve close	Relay test (7700)	Relay output QX22 module 1
HC1 pump	Relay test (7700)	Relay output QX23 module 1
HC2 3-channel valve opening	Relay test (7700)	Relay output QX21 module 2
HC2 3-channel valve close	Relay test (7700)	Relay output QX22 module 2
HC2 pump	Relay test (7700)	Relay output QX23 module 2
Reset the outputs	Relay test (7700)	No test
Check the sensor values		
External sensor B9	Outside temp B9 (7730)	en °C
DHW sensor B3	DHW temp B3/B38 (7750)	en °C
B1 flow sensor	Sensor temp BX21 module 1 (7830)	en °C
B12 flow sensor	Sensor temp BX21 module 2 (7832)	en °C
Configuration menu		
Check the hydraulic diagram	Check no. heat source 1 (6212)	14
	Check no. heat source 2 (6213)	0
	Check no. storage tank (6215)	4
	Check no. heating circuits (6217)	303

page 7 / 8

On the RVS 63:

	Line No.	Value
 Inputs/outputs test menu 		
Check the outputs		
HC3 pump (Q2)	Relay test (7700)	HC pump Q2
HC3 3-channel valve opening	Relay test (7700)	HC mixing valve open Y1
HC3 3-channel valve close	Relay test (7700)	HC mixing valve close Y2
HC4 pump (Q6)	Relay test (7700)	Pompe CdeC Q6
HC4 3-channel valve opening	Relay test (7700)	HC mixing valve open Y5
HC4 3-channel valve close	Relay test (7700)	HC mixing valve close Y6
Reset the outputs	Relay test (7700)	No test
Check the sensor values		
Circuit 3 network flow sensor (B1)	Flow temp. B1 (7732)	en °C
Circuit 4 network flow sensor (B12)	Flow temp. B12 (7734)	en °C

G. CONFIGURATION OPTIMISATION

On STRATTON MK2 boiler and RVS 63 :

Heating circuit optimisation:

 Heating circuit 1 / 2 menu 		
Adjust the reduced setting	Reduced setpoint (712/1012)	
ECO function for automatic summer / winter switch (see NAVISTEM B3000 manual)	Summer/winter heating limit (1030/1330)	19 °C
Daily ECO function for automatic comfort / reduced switch according to the difference between the set point and the outdoor temperature (see NAVISTEM B3000 manual).	24-hour heating limit (1032/1332)	-3 °C

Diagram: VF4		page 8 / 8
	Line No.	Value
 Heating circuit 1 / 2 timer programme menu 		
Preselection	Preselection (500/520)	
Adjust the timer programming	On / off phases (501506) (521526)	
 Heating circuit 1 / 2 holiday menu 		
Preselection	Preselection (641/651)	
Adjust the timer programming	On / off phases (642643) (652-653)	
 Switch the heating regime to automatic 		Αυτο

Maintenance optimisation on STRATTON MK2 boiler:

A maintenance message may be generated that does not set the boiler to fault. This maintenance message may be displayed after the following 3 counters have expired:

- Time since last maintenance (or commissioning): set parameter 7044 to 12 months.
- Operating hours of the burner (parameter 7040).
- Number of starts (parameter 7042)

These last 2 parameters are dependent on the boiler's hydraulic installation. We recommend using at least parameter 7044 for annual maintenance.

Ajusting the DWH (on the RVS 63):

• Timer prog. 4/DHW menu		
Adjust the programmed times	On/off phases (561566)	
• DHW menu		
Adjust the low setpoint	Low setpoint (1612)	
Release the DHW load according to the timer program	Release (1620)	
Adjust the frequency of the anti- legionella cycle	Anti-legionella function (1640)	
Selon le réglage précédent, ajuster la	Periodic legion. funct.(1641)	
périodicité ou le jour de la semaine	or Legionella funct weekday (1642)	
Adjust the anti-legionella cycle temperature setpoint	Anti-legionella setpoint (1645)	
Adjust the duration of the anti-legionella cycle	Anti-legionella function duration (1646)	
• DHW tank menu		
Adjust the primary rise/DHW	Rise in initial setpoint (5020)	16 °C

SINGLE BOILER 1 non-regulated circuit with sliding flow



A. HYDRAULIC DIAGRAM



figure 26 - VF20 diagram

The boiler operates in variable flow temperature according to the outdoor temperature measured by the exterior sensor QAC 34.

The heating water law is programmed on the NAVISTEM B3000, with or without a low temperature limit and with a weekly programme.

The flow rate of the heating pump, in m^3/h , is adjusted to the real needs of the installation and, as a minimum, to P/25, with P power in th/h of the boiler.

If the heating pump is variable-flow rate, it must be set to a constant flow rate to deliver the minimum flow required by the generator.

If the installation is equipped with thermostatic taps on the emitters, the bypass between the outward and return lines of the network is essential. It is equipped with a differential valve that allows for the free flow of the heating pump when the thermostatic taps close.

Diagrams: VF20, VF21, VF21bis

page 2 / 5



figure 27 - VF21, VF21bis diagrams

The boiler operates in variable flow temperature according to the outdoor temperature measured by the exterior sensor QAC 34.

The heating water law is programmed on the NAVISTEM B3000, with or without a low temperature limit and with a weekly programme.

The flow rate of the heating pump, in m^3/h , is adjusted to the real needs of the installation and, as a minimum, to P/25, with P power in th/h of the boiler.

The pump heating will have to allow to work in constant speed to insure the minimum flow necessary for the generator.

B. REGULATION ACCESSORY REQUIRED

	Quantity	Appliance reference	Order No.
Output sensor kit	1	QAC 34	059260

Diagrams: VF20, VF21, VF21bis

page 3 / 5

C. RECOMMENDED HYDRAULIC ACCESSORY

		Order No.
Hydraulic kit for boiler only	for VARFREE 40 kW and 60 kW	082324
	for VARFREE 80 kW and 100 kW	082325
	for VARFREE 120 kW	082326

D. CUSTOMER'S ELECTRICAL CONNECTION



Diagrams: VF20, VF21, VF21bis

page 4 / 5

E. SPECIFIC START-UP PROCEDURE

- G → Make the accessories' electrical connections.
- Start up the boiler only.
- G → Make the following settings:

	Line No.	Value
 Configuration menu 		
Save the sensors	Save sensors (6200)	Yes (switches back to no automatically)
Time and date menu		
Set the time	Hours / minutes (1)	HH.MM
Set the date	Day / month (2)	DD.MM
Set the year	Year (3)	YYYY
 Configuration menu 		
Start up heating circuit 1	Heating circuit 1 (5710)	On
Configure the alarm output	Relay output QX1 (5890)	Alarm output K10
Configure the direct circuit pump Q2	Relay output QX2 (5891)	Heat circuit pump HC1 Q2
Heating circuit 1 menu		
For each circuit:		
Adjust the comfort setting	Comfort setpoint (710)	
Adjust the curve slope	Heating curve slope (720)	
Adjust the min. flow temperature for heating circuit 1, if necessary	Flow temp setpoint min (740)	in °C
Removal of the over-value	Mixing valve boost (830)	0 °C
Switch the heating regime to permanent comfort		桊

F. ELECTRICAL AND HYDRAULIC VALIDATION

 <u>Inputs/outputs test</u> menu 		
Check the outputs		
Alarm relay	Relay test (7700)	Relay output QX1
Direct circuit pump Q2	Relay test (7700)	Relay output QX3
Reset the outputs	Relay test (7700)	No test

. . .

T
In diagram VF21, it is IMPERATIVE to programme the same ranges

on the unit heater for the optimisation to work.

Diagrams: VF20, VF21, VF21bis

page 5 / 5

Line No.	Value
Outside temp B9 (7730)	in °C
Check no. heat source 1 (6212)	14
Check no. heat source 2 (6213)	0
Check no. storage tank (6215)	0
Check no. heating circuits (6217)	2
	Line No. Outside temp B9 (7730) Check no. heat source 1 (6212) Check no. heat source 2 (6213) Check no. storage tank (6215) Check no. heating circuits (6217)

G. CONFIGURATION OPTIMISATION

Heating circuit optimisation:

IMPORTANT:

 Heating circuit 1 menu 		
Adjust the reduced setting	Reduced setpoint (712)	
 Heating circuit 1 timer programme menu 		
Preselection	Preselection (500)	
Adjust the timer programming	On / off phases (501506)	
 Heating circuit 1 holiday menu 		
Preselection	Preselection (641)	
Adjust the timer programming	On / off phases (642643)	
		•

Switch the heating regime to automatic

Auto

Maintenance optimisation

A maintenance message may be generated that does not set the boiler to fault. This maintenance message may be displayed after the following 3 counters have expired:

- Time since last maintenance (or commissioning): set parameter 7044 to 12 months.
- Operating hours of the burner (parameter 7040).
- Number of starts (parameter 7042)

These last 2 parameters are dependent on the boiler's hydraulic installation. We recommend using at least parameter 7044 for annual maintenance.

SINGLE BOILER

Production of DHW with a plate exchanger on the primary

VF22

Diagram

page 1 / 5

A. HYDRAULIC DIAGRAM



figure 28 - VF22 diagram

The boiler operates at the flow temperature required to produce the domestic hot water.

The flow rate of the pump, in m^3/h , is adjusted to the real needs of the installation and, as a minimum, to P/25, with P power in th/h of the boiler.

IThe pump heating will have to allow to work in constant speed to insure the minimum flow necessary for the generator.

The domestic hot water production system has its own regulator.

A sensor QAZ 36, positioned inside the storage tank and connected to the generator, informs the boiler of the need for domestic hot water.

B. REGULATION ACCESSORY REQUIRED

	Quantity	Appliance reference	Order No.
DHW sensor kit	1	QAZ 36	059261

page 2 / 5

C. RECOMMENDED HYDRAULIC ACCESSORY

		Order No.
Hydraulic kit for boiler only	for VARFREE 40 kW and 60 kW	082324
	for VARFREE 80 kW and 100 kW	082325
	for VARFREE 120 kW	082326

D. CUSTOMER'S ELECTRICAL CONNECTION



E. SPECIFIC START-UP PROCEDURE

- I Make the accessories' electrical connections.
- Start up the boiler only.
- Make the following settings:

	Line No.	Value
 Time and date menu 		
Set the time	Hours / minutes (1)	HH.MM
Set the date	Day / month (2)	DD.MM
Set the year	Year (3)	YYYY
 Configuration menu 		
Configure the alarm output	Relay output QX1 (5890)	Alarm output K10
Configure the tank pump	Relay output QX3 (5892)	Consumer circuit pump 1 Q15
Define a low limit	Function input H1 (5950)	Consumer request VK1
Position a shunt on H1 OU reverse the contact direction	Contact type (5951)	Normally-closed contact (NC)
For the DHW to be effective, an activator must be defined, even if it is not connected	Relay output QX2 (5891)	DHW ctrl elem Q3
Consumer circuit 1 menu		
Set the output setting to be taken into account if the Consumer circuit is requested	Flow temp setp cons request (1859)	60 °C (depends on the Rubis setting)
Remove pump stoppage on DHW priority (OEM setting)	DHW priority (1874)	No
Domestic hot water menu		
Adjust the comfort setting	Nominal setpoint (1610)	3°C less than the Rubis set point
Adjust the DHW release mode	Release (1620)	24h/day
Remove the DHW priority	Charging priority (1630)	Without
DHW tank menu		
Over-value of the boiler outlet temperature when the DHW is restarted	Flow setpoint boost (5020)	13 °C

page 4 / 5

Settings on the Rubis

Adjust the outlet temperature set point on the Rubis to 58°C.

Summary of the rules for the adjustment of the set points for the DHW

Set point of the consuming circuit (low limit) = set point of the outlet T° of the Rubis +5°C Set point of the DHW on the boiler = set point of the outlet T° of the Rubis -2°C Over-value of the boiler outlet temperature when the DHW is restarted = 13°C

Process description

The consuming circuit keeps the temperature of the tank at 63° C. In this case, the set point of the boiler = the set point of the consuming circuit (63° C).

If the sensor inside the tank detects a temperature = the set point of the DHW (56°C) $-5^{\circ}C=51^{\circ}C$, the DHW cycle starts. The output temperature of the boiler is then = the set point of the DHW (56°C) + over-value (13°C) = 69°C.

The DHW cycle stops when the sensor inside the tank reaches the DHW set point temperature $(56^{\circ}C)$. The boiler then returns to the set point of the consuming circuit (63°) .

Activate the DHW mode		
	Line No.	Value
 Configuration menu 		
Save the sensors	Save sensors (6200)	Yes (switches back to no automatically)
F. ELECTRICAL AND HYDRAULIC VA	LIDATION	
 Inputs/outputs test menu 		
Check the outputs		
Alarm relay	Relay test (7700)	Relay output QX1
Tank pump Q15	Relay test (7700)	Relay output QX3
Reset the outputs	Relay test (7700)	No test
Check the sensor values		
B3 DHW sensor	DHW temp B3/B38 (7750)	in °C
Check the status of contact H1	Contact state H1 (7841)	Closed if the shunt is in place
 Configuration menu 		
Check the hydraulic diagram	Check no. heat source 1 (6212)	13
	Check no. heat source 2 (6213)	0
	Check no. storage tank (6215)	4
	Check no. heating circuits (6217)	0

page 5 / 5

G. CONFIGURATION OPTIMISATION

DHW optimisation:

	Line No.	Value
• DHW tank menu		
Adjust the over value	Flow setpoint boost (5020)	16 °C

Maintenance optimisation

A maintenance message may be generated that does not set the boiler to fault. This maintenance message may be displayed after the following 3 counters have expired:

- Time since last maintenance (or commissioning): set parameter 7044 to 12 months.
- Operating hours of the burner (parameter 7040).
- Number of starts (parameter 7042)

These last 2 parameters are dependent on the boiler's hydraulic installation. We recommend using at least parameter 7044 for annual maintenance.

SINGLE BOILER DHW production with hygiatherm

Diagram VF23

page 1 / 5

A. HYDRAULIC DIAGRAM



figure 29 - VF23 diagram

The boiler operates at the flow temperature required to produce the domestic hot water.

The flow rate of the pump, in m^3/h , is adjusted to the real needs of the installation and, as a minimum, to P/25, with P power in th/h of the boiler.

The pump heating will have to allow to work in constant speed to insure the minimum flow necessary for the generator.

The domestic hot water production system has its own regulator.

A sensor QAZ 36, inside the primary tank, and connected to the generator, is used to restart the boiler more quickly, especially when the base primary temperature is low.

page 2 / 5

B. REGULATION ACCESSORY REQUIRED

	Quantity	Appliance reference	Order No.
DHW sensor kit	1	QAZ 36	059261

C. RECOMMENDED HYDRAULIC ACCESSORY

		Order No.
Hydraulic kit for boiler only	for VARFREE 40 kW and 60 kW	082324
	for VARFREE 80 kW and 100 kW	082325
	for VARFREE 120 kW	082326

D. CUSTOMER'S ELECTRICAL CONNECTION



Page 80 / 130

page 3 / 5

E. SPECIFIC START-UP PROCEDURE

- I Make the accessories' electrical connections.
- Start up the boiler only.

• Time and date menu	
nine and date mend	
Set the time Hours / minutes (1)	HH.MM
Set the date Day / month (2)	JJ.MM
Set the year Year (3)	AAAA
Configuration menu	
Configure the alarm output Relay output QX1 (5890)	Alarm output K10
For the DHW to be effective, anRelay output QX2 (5891)activator must be defined, even if it is not connectedFor the DHW to be defined, even if it is not connected	DHW ctrl elem Q3
Configure the tank charge pump Relay output QX3 (5892)	Consumer circuit pump 1 Q15
Consumer circuit 1 menu	
Set the output setting to be taken into account if the Consumer circuit is requested	60 °C (depends on the Rubis setting)
Remove pump stoppage on DHW DHW priority (1874) priority (OEM setting)	No
Domestic hot water menu	
Adjust the comfort setting Nominal setpoint (1610)	55 °C
Adjust the DHW release mode Release (1620)	24/day
• <i>DWH tank</i> Menu	
Over-value of the boiler outlet Flow setpoint boost (5020) temperature when the DHW is restarted	7 °C

Settings on the Rubis

Adjust the outlet temperature set point on the Rubis to 58°C.

Summary of the rules for the adjustment of the set points for the DHW

Set point of the consuming circuit (low limit) = set point of the outlet T° of the Rubis +5°C Set point of the DHW on the boiler = set point of the outlet T° of the Rubis +3°C Over-value of the boiler outlet temperature when the DHW is restarted = 7°C

Process description

· Activate the DHW mode

 Configuration menu Save the sensors

The consuming circuit keeps the temperature of the tank at 63°C. In this case, the set point of the boiler = the set point of the consuming circuit $(63^{\circ}C)$.

If the sensor inside the tank detects a temperature = the set point of the DHW ($61^{\circ}C$) -5°C, the DHW cycle starts. The output temperature of the boiler is then = the set point of the DHW ($61^{\circ}C$) + over-value $(7^{\circ}C) = 68^{\circ}C$.

The DHW cycle stops when the sensor inside the tank reaches the DHW set point temperature (61°C). The boiler then returns to the set point of the consuming circuit (63°).

ELECTRICAL AND HIDRAULIC VA	LIDATION	
 Inputs/outputs test menu 		
Check the outputs		
Alarm relay	Relay test (7700)	Relay output QX1
Tank pump Q15	Relay test (7700)	Relay output QX3
Reset the outputs	Relay test (7700)	No test
Check the sensor values		
B3 DHW sensor	DHW temp B3/B38 (7750)	in °C
Configuration menu		
oomgalation nona		
Check the hydraulic diagram	Check no. heat source 1 (6212)	13

- Check no. heat source 2 (6213) 0 Check no. storage tank (6215) 4
- Check no. heating circuits (6217) 0

Value

Yes (switches back to no automatically)

Line No.

Save sensors (6200)



page 5 / 5

G. CONFIGURATION OPTIMISATION

Maintenance optimisation

A maintenance message may be generated that does not set the boiler to fault. This maintenance message may be displayed after the following 3 counters have expired:

- Time since last maintenance (or commissioning): set parameter 7044 to 12 months.
- Operating hours of the burner (parameter 7040).
- Number of starts (parameter 7042)

These last 2 parameters are dependent on the boiler's hydraulic installation. We recommend using at least parameter 7044 for annual maintenance.

SINGLE BOILER DHW production with tank with coil

Diagram VF24

page 1/4

A. HYDRAULIC DIAGRAM



figure 30 - VF24 diagram

The boiler operates at the flow temperature required to produce the domestic hot water.

The flow rate of the pump, in m^3/h , is adjusted to the real needs of the installation and, as a minimum, to P/25, with P power in th/h of the boiler.

The pump heating will have to allow to work in constant speed to insure the minimum flow necessary for the generator.

The domestic hot water production system has its own regulator.

A sensor QAZ 36, positioned inside the storage tank and connected to the generator, informs the boiler of the need for domestic hot water.

page 2 / 4

B. REGULATION ACCESSORY REQUIRED

	Quantity	Appliance reference	Order No.
DHW sensor kit	1	QAZ 36	059261

C. RECOMMENDED HYDRAULIC ACCESSORY

		Order No.
Hydraulic kit for boiler only	for VARFREE 40 kW and 60 kW for VARFREE 80 kW and 100 kW for VAREREE 120 kW	082324 082325 082326

D. CUSTOMER'S ELECTRICAL CONNECTION



18.03.2017

E. D. SPECIFIC START-UP PROCEDURE

- I Make the accessories' electrical connections.
- Start up the boiler only.
- G → Make the following settings:

	Line No.	Value
 Time and date menu 		
Set the time	Hours / minutes (1)	HH.MM
Set the date	Day / month (2)	DD.MM
Set the year	Year (3)	YYYY
Configuration menu		
Configure the alarm output	Relay output QX1 (5890)	Alarm output K10
Configure DHW pump Q3	Relay output QX2 (5891)	DHW ctrl elem Q3
Configuration menu		
Save the sensors	Save sensors (6200)	Yes (switches back to no automatically)
 Domestic hot water menu 		
Adjust the comfort setting	Nominal setpoint (1610)	55 °C
Adjust the DHW release mode	Release (1620)	24/day

• Activate the DHW mode



F. ELECTRICAL AND HYDRAULIC VALIDATION

 Inputs/outputs test menu 		
Check the outputs		
Alarm relay	Relay test (7700)	Relay output QX1
DHW pump Q3	Relay test (7700)	Relay output QX2
Reset the outputs	Relay test (7700)	No test

Diagram: VF24	page 4 / 4
---------------	------------

	Line No.	Value
Check the sensor values		
B3 DHW sensor	DHW temp B3/B38 (7750)	in °C
Configuration menu		
Check the hydraulic diagram	Check no. heat source 1 (6212)	13
	Check no. heat source 2 (6213)	0
	Check no. storage tank (6215)	4
	Check no. heating circuits (6217)	0

G. CONFIGURATION OPTIMISATION

DHW optimisation:

•	DHW	tank	menu
---	-----	------	------

Adjust the over value

Flow setpoint boost (5020) 16 °C

Maintenance optimisation

A maintenance message may be generated that does not set the boiler to fault. This maintenance message may be displayed after the following 3 counters have expired:

- Time since last maintenance (or commissioning): set parameter 7044 to 12 months.
- Operating hours of the burner (parameter 7040).
- Number of starts (parameter 7042)

These last 2 parameters are dependent on the boiler's hydraulic installation. We recommend using at least parameter 7044 for annual maintenance.

BOILER CASCADE Without control of the secondary, communications networks 0...10V or LPB

Diagram VF10

page 1 / 7

A. HYDRAULIC DIAGRAM



figure 31 - VF10 diagram

The existing regulation controls all the circuits of the installation. It determines the outlet set point temperature that the installation requires and sends it to the boilers, either in a 0 - 10V signal directly to the NAVISTEM B3000 that is the master of the cascade, or over the LPB bus to each NAVISTEM B3000. The cascade of boilers is controlled by the installation's regulation system according to the needs. The set point that is sent reflects the heating temperature that the installation requires at the time t.

B. REGULATION ACCESSORY REQUIRED

	Quantity	Appliance reference	Order No.
Communication kit	2	OCI 345	059572
Network sensor kit	1	QAD 36	059592

page 2 / 7

C. RECOMMENDED HYDRAULIC ACCESSORY

	Order N° for VARFREE		
	40 kW and 60 kW	80 kW and 100 kW	120 kW
Duo Pack	082275	082278	082281
Trio Pack	082276	082279	082282
Quatro Pack	082277	082280	082283

C. CUSTOMER'S ELECTRICAL CONNECTION

Boiler No. 1:



page 3 / 7



Boiler No. 2 (and the following ones):

E. SPECIFIC START-UP PROCEDURE

- $\ensuremath{\vartriangleright}$ Make the accessories' electrical connections.
- Start up the boiler only.
- Make the following settings:

On boiler No. 1: master



page 4 / 7

	Line No.	Value
 Time and date menu 		
Set the time	Hours / minutes (1)	HH.MM
Set the date	Day / month (2)	DD.MM
Set the year	Year (3)	YYYY
Configuration		
• Comparation Interna	0	0
B10	Sensor input BX2 (5931)	B10
For a request via 010V input		
Configure the H1 input	Function input H1 (5950)	Consumer request VK1 10V
	Voltage value 1 H1 (5953)	0.0
	Function value 1 H1 (5954)	0
	Voltage value 2 H1 (5955)	10.0
	Function value 2 H1 (5956)	1000 (for equivalence 10 V = 100 °C)
For a request via LPB		
Check that the secondary regulatory is define than 0 (reserved for the generators)	ned on an LPB segment other	
In all cases (<u>LPB network menu</u>)		
Configure the boiler as master the of the	Device address (6600)	1
cascade:	Segment address (6601)	0
	Bus power supply function (6604)	Automatically
	Clock mode (6640)	Master (or <i>slave with remote setting</i> if the PLC is the master clock)
To display the faults from other modules on the console of the module you are adjusting	Display system messages (6610)	Yes
If you want an alarm report on this module (output K10 (QX1)) containing all the faults from all the modules	Syst messages alarm relay (6611)	Yes
Save the sensors	Save sensors (6200)	Yes (switches back to no automatically)

page 5 / 7

On boiler No. 2 or the following boilers: slave

	Line No.	Value
 Configuration menu 		
Boiler pump supplied by YGNIS	No adjustments necessary	
Boiler pump supplied by the customer (all-or-nothing control)	Relay output QX3 (5892)	Boiler pump Q1
 LPB network menu 		
Configure the boiler as a slave in the cascade:	Device address (6600)	2 (or following, for the other slaves)
	Segment address (6601)	0
	Bus power supply function (6604)	Automatically
	Clock mode (6640)	Slave without remote setting

• Connect the bus between the boilers ($\underline{\wedge}$ pay attention to the polarity).

• Switch off, then switch on the slave boiler(s). If the communication has been correctly established, the clock is updated correctly.

F. ELECTRICAL AND HYDRAULIC VALIDATION

On boiler No. 1: master · Cascade diagnostic menu Check that all the boilers are in the cascade Priority source 1 (8100) Released / not released Priority source 2 (8101) Released / not released For a request via 0...10V input · Inputs/outputs test menu Voltage in H1 Voltage signal H1 (7840) To be validated with the voltage sent by the boiler room's PLC For a request via LPB If the boiler room's regulator is configured as slave clock, it must retrieve the date and time.

page 6 / 7

In both cases

	Line No.	Value
 Configuration menu 		
Check the hydraulic diagram	Check no. heat source 1 (6212)	14
	Check no. heat source 2 (6213)	0
	Check no. storage tank (6215)	0
	Check no. heating circuits (6217)	0
 Inputs/outputs test menu 		
Check the outputs		
Alarm relay	Relay test (7700)	Relay output QX1
Boiler pump control, if supplied by customer	Relay test (7700)	Relay output QX3
Reset the outputs	Relay test (7700)	No test
Check the sensor values		
Cascade cylinder outlet sensor B10	Sensor temp BX2 (7821)	in °C
On boiler No. 2 or the following boiler(s):	slave	
 Inputs/outputs test menu 		
Boiler pump control, if supplied by customer	Relay test (7700)	Relay output QX3
Reset the outputs	Relay test (7700)	No test
Configuration menu		
Check the hydraulic diagram	Check no. heat source 1 (6212)	14
	Check no. heat source 2 (6213)	0
	Check no. storage tank (6215)	0
	Check no. heating circuits (6217)	0

G. CONFIGURATION OPTIMISATION

Cascade optimisation:

The cascade can be optimised if necessary using the settings in the *Cascade* menu. Refer to the NAVISTEM B3000 boiler's controller manual for more details.

page 7 / 7

Maintenance optimisation

A maintenance message may be generated that does not set the boiler to fault. This maintenance message may be displayed after the following 3 counters have expired:

- Time since last maintenance (or commissioning): set parameter 7044 to 12 months.
- Operating hours of the burner (parameter 7040).
- Number of starts (parameter 7042)

These last 2 parameters are dependent on the boiler's hydraulic installation. We recommend using at least parameter 7044 for annual maintenance.

BOILER CASCADE

2 regulated circuits per boiler and production of DHW

Diagram VF11

page 1 / 9

A. HYDRAULIC DIAGRAM



figure 32 - VF11 diagram

The master NAVISTEM B3000 controls the cascade of boilers on the basis of the outlet temperature measured by the sensor QAD 36. Each NAVISTEM B3000 controls the charge pump of its own generator.

The boilers operate with a variable outlet temperature according to the outdoor temperature measured by the sensor QAC 34, temperature adjusted according to the most demanding circuit, without parallel offset, without a low temperature limit and with a weekly programme.

The heating programme is per week. Each AGU 2.550 module controls a regulated circuit with a 3-way valve.

B. REGULATION ACCESSORY REQUIRED

	Quantity	Appliance reference	Order No.
Communication kit	2 (3)	OCI 345	059752
Extension module kit (delivered with a network sensor QAD 36)	2	AGU 2.550	059753
DHW sensor kit	1	QAZ 36	059261
Output sensor kit	1	QAC 34	059260
Network sensor kit	1	QAD 36	059592

C. RECOMMENDED HYDRAULIC ACCESSORY

	Order N° for VARFREE			
	40 kW and 60 kW	80 kW and 100 kW	120 kW	
Duo Pack	082275	082278	082281	
Trio Pack	082276	082279	082282	
Quatro Pack	082277	082280	082283	

page 2 / 9

D. CUSTOMER'S ELECTRICAL CONNECTION Boiler No. 1:



page 3 / 9



page 4 / 9

E. SPECIFIC START-UP PROCEDURE

Make the accessories' electrical connections.



T: Configure the switches on the AGU 2.550 extension modules.

- Start up the boiler only.
- Grry out the adjustments below.

On boiler No. 1: master

	Line No.	Value
 Configuration menu 		
Boiler pump supplied by YGNIS	No adjustments necessary	
Boiler pump supplied by the customer (all-or-nothing control)	Relay output QX3 (5892)	Boiler pump Q1
Time and date menu		
Set the time	Hours / minutes (1)	HH.MM
Set the date	Day / month (2)	DD.MM
Set the year	Year (3)	YYYY
 Configuration menu 		
Start up heating circuit 1	Heating circuit 1 (5710)	On
Start up heating circuit 2	Heating circuit 2 (5715)	On
Configure the alarm output	Relay output QX1 (5890)	Alarm output K10
Configure DHW pump Q3	Relay output QX2 (5891)	DHW ctrl elem Q3
Configure the cascade cylinder outlet sensor B10	Sensor input BX2 (5931)	Common flow sensor B10
Configure the extension modules	Function extension module 1 (6020)	Heat circuit 1
	Function extension module 2 (6021)	Heat circuit 2
 Configure as master of the cascade: LPB 	network menu	
Appliance number	Device address (6600)	1
Segment number	Segment address (6601)	0
Adjust the bus supply	Bus power supply function (6604)	Automatically
Adjust the clock rate	Clock mode (6640)	Master
 Heating circuit 1 / 2 menu 		

page 5 / 9

Adjust the comfort setting Adjust the curve slope	<i>Line No.</i> Comfort setpoint (710/1010) Heating curve slope (720/1020)	Value
 Switch the heating regime to permanent comf 	fort	*
 Domestic hot water menu 		
Adjust the comfort setting	Nominal setpoint (1610)	
Activate the DHW mode		エ
Configuration menu		
Save the sensors	Save sensors (6200)	Yes (switches back to no automatically)
On boiler n°2 or the following boilers: slave		
 Configuration menu 		
Boiler pump supplied by YGNIS	No adjustments necessary	
Boiler pump supplied by the customer (all-or-nothing control)	Relay output QX3 (5892)	Boiler pump Q1
Start the third heating circuit	Heating circuit 1 (5710)	On
Start the fourth heating circuit	Heating circuit 2 (5715)	On
Configure the alarm output	Relay output QX1 (5890)	Alarm output K10
Configure the extension modules	Function extension module 1 (6020)	Heat circuit 1
	Function extension module 2 (6021)	Heat circuit 2
 Configure as a slave of the cascade: LPB 	<i>network</i> menu	
Appliance number	Device address (6600)	2 (or following, for the other slaves)
Segment number	Segment address (6601)	0
Adjust the bus supply	Bus power supply function (6604)	Automatically
Adjust the clock rate	Clock mode (6640)	Slave without remote setting

Page 100 / 130

Diagram: VF11

	Line No.	Value
To display the faults from other modules on the console of the module you are adjusting	Display system messages (6610)	Yes
If you want an alarm report on this module (output K10 (QX1)) containing all the faults from all the modules	Syst messages alarm relay (6611)	Yes
Switch the heating regime to permanent comfor	t	桊

- Connect the bus between the boilers (A pay attention to the polarity).
- Switch off, then switch on the slave boiler(s). If the communication has been correctly established, the clock is updated correctly.

F. ELECTRICAL AND HYDRAULIC VALIDATION

On boiler N°1: master

 Cascade diagnostic menu 		
Check that all the boilers are in the cascade		
	Priority source 1 (8100)	Released / not released
	Priority source 2 (8101)	Released / not released
 Inputs/outputs test menu 		
Check the outputs		
Alarm relay	Relay test (7700)	Relay output QX1
Boiler pump control, if supplied by customer	Relay test (7700)	Relay output QX3
DHW pump Q3	Relay test (7700)	Relay output QX2
Heating circuit 2/3 3-channel valve opening	Relay test (7700)	Relay output QX21 module 1, 2
Heating circuit 2/3 3-channel valve close	Relay test (7700)	Relay output QX22 module 1, 2
Heating circuit 1 / 2 pumps	Relay test (7700)	Relay output QX23 module 1, 2

T

Reset the outputs	Relay test (7700)	No test
	Line No.	Value
Check the sensor values		
External sensor B9	Outside temp B9 (7730)	in °C
DHW sensor B3	DHW temp B3/B8 (7750)	in °C
Cascade cylinder outlet sensor B10	Sensor temp BX2 (7821)	in °C
B1 flow sensor	Sensor temp BX21 module 1 (7830)	in °C
B12 flow sensor	Sensor temp BX21 module 2 (7832)	in °C
Configuration menu		
Check the hydraulic diagram	Check no. heat source 1 (6212)	14
	Check no. heat source 2 (6213)	0
	Check no. storage tank (6215)	4
	Check no. heating circuits (6217)	303

On boiler n°2 or the following boilers: slave

Inputs/outputs test menu Check the outputs Alarm relay Relay test (7700) Re Boiler pump control, if supplied by customer Heating circuit 2/3 3-channel Valve opening Heating circuit 2/3 3-channel Relay test (7700) Re Re Re Relay test (7700) Re Re Re Relay test (7700) Re	
Check the outputsRelay test (7700)Relay test (7700)Re	
Alarm relayRelay test (7700)Relay te	
Boiler pump control, if supplied by customerRelay test (7700)Re (7700)Heating circuit 2/3 3-channel valve openingRelay test (7700)Re (7700)Heating circuit 2/3 3-channel valve closeRelay test (7700)Re (7700)Heating circuit 1 / 2 pumpsRelay test (7700)Re (7700)Reset the outputsRelay test (7700)Re (7700)Check the sensor values B1.2 flow sensorSensor temp BX21 module 1 (7830)in	Relay output QX1
Heating circuit 2/33-channelRelay test (7700)Re modeHeating circuit 2/33-channelRelay test (7700)Re modeHeating circuit 1/2 pumpsRelay test (7700)Re modeHeating circuit 1/2 pumpsRelay test (7700)Re modeReset the outputsRelay test (7700)NoteCheck the sensor values B1.2 flow sensorSensor temp BX21 module 1 (7830)in	Relay output QX3
Heating circuit 2/33-channelRelay test (7700)ReferenceValve closeRelay test (7700)ReferenceReferenceHeating circuit 1 / 2 pumpsRelay test (7700)ReferenceReferenceReset the outputsRelay test (7700)NoteReferenceCheck the sensor values B1.2 flow sensorSensor temp BX21 module 1 (7830)in	Relay output QX21 module 1, 2
Heating circuit 1 / 2 pumps Relay test (7700) Reference Reset the outputs Relay test (7700) No Check the sensor values Sensor temp BX21 module 1 (7830) in	Relay output QX22 module 1, 2
Reset the outputs Relay test (7700) No Check the sensor values B1.2 flow sensor Sensor temp BX21 module 1 (7830) in	Relay output QX23 module 1, 2
Check the sensor valuesB1.2 flow sensorSensor temp BX21 module 1 (7830)	No test
B1.2 flow sensor Sensor temp BX21 module 1 (7830) in	
	in °C
B12.2 flow sensor Sensor temp BX21 module 2 (7832) in	in °C

•

Schéma : VF11

CONFIGURATION OPTIMISATION	l	
naster and slave boilers		
Heating circuit optimisation		
 Heating circuit 1 / 2 menu 		
Adjust the reduced setting	Reduced setpoint (712/1012)	
ECO function for automatic summer / winter switch (see NAVISTEM B3000 manual)	Summer/winter heating limit (1030/1330)	19 °C
Daily ECO function for automatic comfort / reduced switch according to the difference between the set point and the outdoor temperature (see NAVISTEM B3000 manual).	24-hour heating limit (1032/1332)	-3 °C
• Heating circuit 1 / 2 timer programme	nenu	
Preselection	Preselection (500/520)	
Adjust the timer programming	On / off phases (501506) (521526)	
 Heating circuit 1 / 2 holiday menu 		
Preselection	Preselection (641/651)	
Adjust the timer programming	On / off phases (642643) (652-653)	

G. CON

Check the hydraulic diagram

On mast

Configuration menu

/ winter switch (see NAVISTEM B3000 manual)	
 Daily ECO function for automatic comfort / reduced switch according to the difference between the set point and the outdoor temperature (see NAVISTEM B3000 manual). Heating circuit 1 / 2 timer programme menu 	24-hour heating I
Preselection	Presel
Adjust the timer programming	On / off ph
 Heating circuit 1 / 2 holiday menu 	

• Switch the heating regime to automatic

<u>DHW optimisation:</u>		
• DHW tank menu		
Adjust the over value	Flow setpoint boost (5020)	16 °C

Auto

Line No. Value

14

0

0

303

Check no. heat source 1 (6212)

Check no. heat source 2 (6213)

Check no. storage tank (6215)

Check no. heating circuits (6217)

page 9 / 9

Maintenance optimisation

A maintenance message may be generated that does not set the boiler to fault. This maintenance message may be displayed after the following 3 counters have expired:

- Time since last maintenance (or commissioning): set parameter 7044 to 12 months.
- Operating hours of the burner (parameter 7040).
- Number of starts (parameter 7042)

These last 2 parameters are dependent on the boiler's hydraulic installation. We recommend using at least parameter 7044 for annual maintenance.

10. TARTALÉK ALKATRÉSZ LISTA



ITEM	DESIGNATION	MODELS				
		40 kW	60 kW	80 kW	100 kW	120 kW
001	Előlap			076638		
002	Bal vagy Jobb oldal	076	076640 076641		076642	
003	Tartó fül (x 4)	076644				
004	Ragasztószalag: long 3.5 m	076649				
005	Koncentrikus adapter	076650 076651				
006	Adapter tömítés	076652 076653				
007	Felhasználói felület	076695				
008	Kijelző tartófül (x 2)	076694				
009	Kijelző tartó	076693				



figure 34 - Control panel

17514		MODELS				
IIEIVI	DESIGNATION	40 kW	60 kW	80 kW	100 kW	120 kW
101	Burkolat NAVISTEM B3000			076697		
102	Csavar a NAVISTEM B3000 burkolathoz			076698		
103	Ragasztószalag a vurkolathoz 1.5 m			076648		
104	Platform with configured NAVISTEM B3000	076505	076506	076507	076508	076510
105	Alaplap a NAVISTEM B3000hez	076127				
106	Biztosíték	076130				
107	Biztosíték (T 6.3 H - 5x20)	071898				
108	Biztosíték ház	076129				
109	Csatlakozó készlet	076128				
110	Teljes kijelző szett	076131				
111	Csak kijelző	076132				
112	Műanyag keret LED board + switch + LED ribbon cable	076133				
113	Tekerő gomb	076135				
114	Nyomógomb	076134				
	EMC légszűrő	076634				
	Tápkábel	076621		076622		076623
	Jelzővezeték	076624		076625		076626
	Gázszelep kábel	076627		076628		
	Gyújtó elektróda kábel	073150				
	Hátsó termosztát kábel	076629		076629		
	Ventillátor kábel	076630	076630			
	Ventillátor vezérlő kábel		076631			
	Switch power supply wiring	076632				
	Kijelző tápkábel	076633				



figure 35 - Body and burner for 40 kW and 60 kW models
ITEM	DESIGNATION	MODE	MODELS		
	DESIGNATION	40 kW	60 kW		
201	Füstgáz hőmérséklet érzékelő	0765	516		
202	Légtelenítő cső 1.2 m	0766	61		
203	Hidraulikus csatlakozó	0766	85		
204	Biztonsági termosztát	0761	58		
205	Hőmérséklet érzékelő	0765	515		
206	Előremenő cső	076667	076668		
207	Hidraulikus csatlakozó (szenzorokkal)	0765	518		
208	Áramlás kapcsoló	0765	513		
209	Nyomás kapcsoló	0765	514		
210	Kivezetés (szeleppel és O gyűrűvel)	0766	65		
211	Tömítés	0764	.64		
212	Komplett égő	076465	076466		
213	lonizációs elektróda	0764	63		
214	Gyújtó elektróda	0764	62		
215	Az égő tűzálló szigetelése	0764	.71		
216	Hőcserélő tűzálló szigetelése	0764	-70		
217	Hőcserélő	076456	076457		
218	Visszatérő csatlakozó	0766	81		
219	Kondenzátum szifon	0718	38		
220	Szifon csatlakozás	0766	62		
221	Gázcsap	0766	571		
222	Gázcső	076672	076673		
223	Venturi mérőpont	0766	58		
224	Venturi	0766	54		
225	Gázszelep	0766	87		
226	ZAG 1 gyújtó transzformátor	0721	31		
227	Levegő nyomáskapcsoló	0725	573		
228	Kondenzvíz elvezető	0766	63		
229	Ventillátor	076690	076691		
230	Füstgáz kivezető	0765	512		
231	Komplett premix égő	0765	20		
232	Szelep tömítés	0765	519		
233	Visszatérő cső	0766	82		
234	Gázszelep tartó	0766	88		
	Gázvezeték tömítése	0766	646		
	Hidraulikus tömítés	0766	45		



figure 36 - Body and burner for 80 kW models and higher

ITEM	DESIGNATION	MODELS			
	DESIGNATION	80 kW	100 kW	120 kW	
301	Levegő nyomáskapcsoló		072173		
302	ZAG 1 gyújtó transzfomátor		072131		
303	Komplett premix szelep		076520		
304	Premix szelep tömítés		076519		
305	Hidraulikus rögzítés		076686		
306	Kondenzátum elvezető		076664		
307	Hidraulikus csatlakozó (érzékelőkkel)		076518		
308	Áramlás kapcsoló		076513		
309	Nyomás szenzor		076514		
310	Szifon csatlkozó		076662		
311	Kondenzátum szifon		071838		
312	Előremenő visszatérő hőmérséklet érzékelő		076515		
313	Biztonsági termosztát		076158		
314	Előremenő cső	076669	076	670	
315	Kimeneti csonk		076666		
316	Égő tömítés		072153		
317	Égőtartó		076476		
318	Teljes égőtartó	076	473	076526	
319	Gyújtó elektróda		072505		
320	Ionizációs elektróda		072506		
321	Égősín	076467 07		076468	
322	Égő tűzálló szigetelés	076472			
323	Hőcserélő tűzálló szigetelés		072152		
324	Hőcserélő	076458	076459	076460	
325	Hátsó termosztát		076475		
326	Visszatérő csonk		076681		
327	Visszatérő cső	076683	076	684	
328	Gázcsap		076671		
329	Gázszelep beömlőnyilás		076677		
330	Gázszelep		076689		
224	Propán fuvóka (Ø 6.5)	076635	-	-	
331	Propán fuvóka (Ø 7.0)		076636		
332	Gászelep kiement	076	678	076679	
333	Gázcsap	076674	076675	076676	
334	Egyenes venturi karima	-		076680	
335	Venturi	076655	076656	076657	
336	Venturi mérőcsonk		076660		
337	Ventillátor		076691		
338	Légtelenítő cső 1.2 m		076661		
339	Kondenzvíz kivezető		072171		
340	Füstgáz kivezetés tömítés		072519		
341	Gáz hőmérsékelt érzékelő		076517		
	Gázrendszer tömítés		076647		
	Hidraulikus rendszer tömítés		076645		

11. CUSTOMER PARAMETERS TABLE

Boiler:

site:....

serial no.:

.....

Please transfer all parameter modifications into this document!

Note: The "access" column indicates the degree of accessibility for information or programming (E for the end user, C for commissioning and S for specialist). The *Commissioning* accessibility level includes the *End User* level. Similarly, the *Specialist* level includes the *Commissioning* level.

Line No.	Programming	Access	Default value	Customer setting
	Time of day and date			
1	Hours / minutes	E	00 : 00	
2	Day / month	E	dd.mm	
3	Year	E	уууу	
5	Start of summertime	С	dd.mm	
6	End of summertime	С	dd.mm	
	Operator section			
20	Language	E	English	
22	Info	С	Temporarily	
26	Operation lock	С	Off	
27	Programming lock	С	Off	
28	Direct adjustment	С	Storage with confirmation	
29	Units	E	°C, bar	
42	Assignment device 1	С	CC 1	
44	Operation HC2	С	Jointly with HC1	
46	Operation HC3/P	С	Jointly with HC1	
70	Software version	С		
	Time prog heating circuit 1			
500	Preselection	E	Mo-Su	
501	First period start time	E	06:00	
502	First period stop time	E	22:00	
503	Second period start time	E	24:00	
504	Second period stop time	E	24:00	
505	Second period start time	E	24:00	
506	Second period stop time	E	24:00	
516	Default values	E	No	
	Time prog heating circuit 2			
520	Preselection	E	Mo-Su	
521	First period start time	E	06:00	
522	First period stop time	E	22:00	
523	Second period start time	E	24:00	
524	Second period stop time	E	24:00	
525	Second period start time	E	24:00	
526	Second period stop time	E	24:00	
536	Default values	E	No	

Line No.	Programming	Access	Default value	Customer setting
	Time prog heating circuit 3			
540	Preselection	E	Mo-Su	
541	First period start time	E	06:00	
542	First period stop time	E	22:00	
543	Second period start time	E	24:00	
544	Second period stop time	E	24:00	
545	Second period start time	E	24:00	
546	Second period stop time	E	24:00	
556	Default values	E	No	
	Time program 4 / DHW			
560	Preselection	E	Mo-Su	
561	First period start time	E	06:00	
562	First period stop time	E	22:00	
563	Second period start time	E	24:00	
564	Second period stop time	E	24:00	
565	Second period start time	E	24:00	
566	Second period stop time	E	24:00	
576	Default values	E	No	
	Time program 5			
600	Preselection	E	Mo-Su	
601	First period start time	E	06:00	
602	First period stop time	F	22:00	
603	Second period start time	F F	24:00	
604	Second period stop time	E	24:00	
605	Second period start time	F F	24:00	
606	Second period stop time	F	24:00	
616	Default values	F	No	
0.0	Holidays heating circuit 1			
641	Preselection	F	Period 1	
642	Begin (dd.mm)	F F	01.01	
643	End (dd mm)	F F	01.01	
648	Operating level	E	Frost protection	
	Holidays heating circuit 2			
651	Preselection	E	Period 1	
652	Begin (dd mm)	F	01.01	
653	End (dd.mm)	E	01.01	
658	Operating level	E	Frost protection	
	Holidays heating circuit 3	, <u> </u>		
661	Preselection	E	Period 1	
662	Begin (dd.mm)	E	01.01	
663	End (dd.mm)	E	01.01	
668	Operating level	F F	Frost protection	
	Heating circuit 1			
710	Comfort setpoint	E	20 °C	
712	Reduced setpoint		16 °C	
714	Frost protection setpoint		10 °C	
716	Comfort setpoint max	-	35 °C	
720	Heating curve slope	F	15	
721	Heating curve displacement	5	0 °C	
· · - ·		ı Č		

Line No.	Programming	Access	Default value	Customer setting
726	Heating curve adaptation	S	Off	
730	Summer/winter heating limit	E	18 °C	
732	24-hour heating limit	S	°C	
740	Flow temp setpoint min	С	3° 8	
741	Flow temp setpoint max	E	80 °C	
742	Flow temp setpoint room stat	E	65 °C	
746	Delay heat request	С	0 s	
750	Room influence	S	20 %	
760	Room temp limitation	S	1 °C	
761	Heating limit room controller	S	16 %	
770	Boost heating	S	5 °C	
780	Quick setback	S	Down to reduced setpoint	
790	Optimum start control max	S	00:00	
791	Optimum stop control max	S	00:00	
800	Reduced setp increase start	S	-5 °C	
801	Reduced sets increase end	s	-15 °C	
809		S	No	
820		٥ ٩	On	
830	Mixing valve boost	٥ ٩	5 °C	
832		0 0	3 nosition	
0.02	TOR Switching differential	0	2-position	
033		 	120 0	
034		<u> </u>	120 \$	
835		5	32 0	
830		5	120 s	
850			011	
851			25 °C	
855				
856	Floor curing day current	E	0	
861	Excess heat draw	S	Always	
870	With buffer	S	Yes	
872	With prim contr/system pump	S	Yes	
880	Pump speed reduction	S	Charactéristic	
882	Pump speed min	S	50 %	
883	Pump speed max	S	100 %	
888	Curve readj at 50% speed	S	33 %	
889	Filter time const speed ctrl	S	5 min	
890	Flow setp readj speed ctrl	S	Yes	
898	Operating level changeover	S	Reduced	
900	Optg mode changeover	S	Protection	
	Heating circuit 2	1		
1010	Comfort setpoint	E	20 °C	
1012	Reduced setpoint	E	16 °C	
1014	Frost protection setpoint	E	10 °C	
1016	Comfort setpoint max	S	35 °C	
1020	Heating curve slope	E	1,5	
1021	Heating curve displacement	S	0°C	
1026	Heating curve adaptation	S	Off	
1030	Summer/winter heating limit	E	18 °C	
1032	24-hour heating limit	S	°C	

Line No.	Programming	Access	Default value	Customer setting
1040	Flow temp setpoint min	С	8 °C	
1041	Flow temp setpoint max	C	80 °C	
1042	Flow temp setpoint room stat	E	65 °C	
1046	Delay heat request	С	0 s	
1050	Room influence	S	20 %	
1060	Room temp limitation	S	1 °C	
1061	Heating limit room controller	S	16 %	
1070	Boost heating	S	5 °C	
1080	Quick setback	S	Down to reduced setpoint	
1090	Optimum start control max	S	00:00	
1091	Optimum stop control max	S	00:00	
1100	Reduced setp increase start	S	-5 °C	
1101	Reduced setp increase end	S	-15 °C	
1109	Continuous pump operation	S	No	
1120	Overtemp prot pump circuit	S	On	
1130	Mixing valve boost	S	5 °C	
1132	Actuator type	S	3-position	
1133	TOR Switching differential	S	2 °C	
1134	Actuator running time	S	120 s	
1135	Mixing valve Xp	S	32 °C	
1136	Mixing valve Tn	S	120 s	
1150	Floor curing function	С	Off	
1151	Floor curing setp manually	С	25 °C	
1155	Floor curing setp current	E	0°C	
1156	Floor curing day current	E	0	
1161	Excess heat draw	S	Always	
1170	With buffer	S	Yes	
1172	With prim contr/system pump	S	Yes	
1180	Pump speed reduction	S	Charactéristic	
1182	Pump speed min	S	50 %	
1183	Pump speed max	S	100 %	
1188	Curve readj at 50% speed	S	33 %	
1189	Filter time const speed ctrl	S	5 min	
1190	Flow setp readj speed ctrl	S	Yes	
1198	Operating level changeover	S	Reduced	
1200	Optg mode changeover	S	Protection	
	Heating circuit 3			
1310	Comfort setpoint	E	20 °C	
1312	Reduced setpoint	E	16 °C	
1314	Frost protection setpoint	E	10 °C	
1316	Comfort setpoint max	S	35 °C	
1320	Heating curve slope	E	1,5	
1321	Heating curve displacement	S	0°C	
1326	Heating curve adaptation	S	Off	
1330	Summer/winter heating limit	E	18 °C	
1332	24-hour heating limit	S	°C	
1340	Flow temp setpoint min	С	3° 8	
1341	Flow temp setpoint max	С	80 °C	
1342	Flow temp setpoint room stat	E	65 °C	

Line No.	Programming	Access	Default value	Customer setting
1346	Delay heat request	С	0 s	
1350	Room influence	S	20 %	
1360	Room temp limitation	S	1 °C	
1361	Heating limit room controller	S	16 %	
1370	Boost heating	S	5 °C	
1380	Quick setback	S	Down to reduced setpoint	
1390	Optimum start control max	S	00:00	
1391	Optimum stop control max	S	00:00	
1400	Reduced setp increase start	S	-5 °C	
1401	Reduced setp increase end	S	-15 °C	
1409	Continuous pump operation	S	No	
1420	Overtemp prot pump circuit	S	On	
1430	Mixing valve boost	S	5 °C	
1432	Actuator type	S	3-position	
1433	TOR Switching differential	S	2 °C	
1434	Actuator running time	S	120 s	
1435	Mixing valve Xp	S	32 °C	
1436	Mixing valve Tn	S	120 s	
1450	Floor curing function	С	Off	
1451	Floor curing setp manually	С	25 °C	
1455	Floor curing setp current	E	0 °C	
1456	Floor curing day current	E	0	
1461	Excess heat draw	S	Always	
1470	With buffer	S	Yes	
1472	With prim contr/system pump	S	Yes	
1480	Pump speed reduction	S	Charactéristic	
1482	Pump speed min	S	50 %	
1483	Pump speed max	S	100 %	
1488	Curve readj at 50% speed	S	33 %	
1489	Filter time const speed ctrl	S	5 min	
1490	Flow setp readj speed ctrl	S	Yes	
1498	Operating level changeover	S	Reduced	
1500	Optg mode changeover	S	Protection	
	Domestic hot water			
1610	Nominal setpoint	E	50 °C	
1612	Reduced setpoint	S	40 °C	
1614	Nominal setpoint max	S	65 °C	
1620	Release	С	Time programs HCs	
1630	Charging priority	С	MC shifting, PC absolute	
1640	Legionella function	S	Off	
1641	Legionella funct periodically	S	3	
1642	Legionella funct weekday	S	Monday	
1644	Legionella funct time	S	05:00	
1645	Legionella funct setpoint	S	65 °C	
1646	Legionella funct duration	S	30 min	
1647	Legionella funct circ pump	S	On	
1660	Circulating pump release	S	DHW release	
1661	Circulating pump cycling	S	On	
1663	Circulation setpoint	S	45 °C	

Line No.	Programming	Access	Default value	Customer setting
1680	Optg mode changeover	S	Off	
	Consumer circuit 1			
1859	Flow temp setp cons request	С	60 °C	
1875	Excess heat draw	S	On	
1878	With buffer	S	No	
1880	With prim contr/system pump	S	No	
	Consumer circuit 2			
1909	Flow temp setp cons request	С	60 °C	
1925	Excess heat draw	S	On	
1928	With buffer	S	No	
1930	With prim contr/system pump	S	No	
	Consumer circuit 3			
1959	Flow temp setp cons request	С	70 °C	
1975	Excess heat draw	S	On	
1978	With buffer	S	No	
1980	With prim contr/system pump	S	No	
	Swimming pool			
2055	Setpoint solar heating	S	26 °C	
2056	Setpoint source heating	S	22 °C	
2065	Charging priority solar	S	Priority 3	
2080	With solar integration	S	Yes	
	Boiler			
2203	Release below outside temp	S	0°C	
2208	Full charging buffer	S	Off	
2210	Setpoint min	S	8 °C	
2212	Setpoint max	S	80 °C	
2214	Setpoint manual control	E	60 °C	
2217	Setpoint frost protection	S	7 °C	
2243	Burner off time min	S	5 min	
2245	SD burner off time	S	10 °C	
2250	Pump overrun time	S	5 min	
2253	Pump overr time after DHW	S	1 min	
2270	Return setpoint min	S	8 °C	
2330	Output nominal	S	40 kW : 40 60 kW 60 80 kW : 80 100 kW : 100 120 kW : 120	
2331	Output basic stage	S	40 kW : 8 60 kW 12 80 kW : 17 100 kW : 20 120 kW : 24	
2441	Fan speed heating max	S	40 kW : 6100 60 kW 7250 80 kW : 6380 100 kW : 6450 120 kW : 6950	
2442	Fan speed full charging max	S	40 kW : 6100 60 kW 7250 80 kW : 6380 100 kW : 6450 120 kW : 6950	

Line No.	Programming	Access	Default value	Customer setting
2444	Fan speed DHW max	S	40 kW : 6100 60 kW 7250 80 kW : 6380 100 kW : 6450 120 kW : 6950	
2454	Switching diff on HCs	S	3 °C	
2455	Switching diff off min HCs	S	3 °C	
2456	Switching diff off max HCs	S	6 °C	
2457	Settling time HCs	S	20 min	
2460	Switching diff on DHW	S	3 °C	
2461	Switching diff off min DHW	S	3 °C	
2462	Switching diff off max DHW	S	6 °C	
2463	Settling time DHW	S	20 min	
2470	Delay heat req special op	С	0 s	
	Cascade		•	
3510	Lead strategy	S	Late on, late off	
3511	Output band min	S	30 %	
3512	Output band max	S	90 %	
3530	Release integral source seq	S	300 °Cmin	
3531	Reset integral source seq	S	100 °Cmin	
3532	Restart lock	S	300 s	
3533	Switch on delay	S	5 min	
3534	Forced time basic stage	S	60 s	
3540	Auto source seq ch'over	S	500 h	
3541	Auto source seq exclusion	S	none	
3544	Leading source	S	source 1	
3560	Return setpoint min	S	8 °C	
3562	Return influence consumers	S	On	
	DHW storage tank			
5020	Flow setpoint boost	S	16 °C	
5021	Transfer boost	S	8 °C	
5022	Type of charging	S	Full charging	
5030	Charging time limitation	S	150 min	
5050	Charging temp max	S	80 °C	
5055	Recooling temp	S	80 °C	
5056	Recooling heat gen/HCs	S	Off	
5057	Recooling collector	S	Off	
5060	El imm heater optg mode	S	Substitute	
5061	El immersion heater release	S	DHW release	
5062	El immersion heater control	S	DHW sensor	
5085	Excess heat draw	S	On	
5090	With buffer	S	No	
5092	With prim contr/system pump	S	No	
5093	With solar integration	S	Yes	
5101	Pump speed min	S	40 %	
5102	Pump speed max	S	100 %	
	General functions		-	
5570	Temp diff on dT contr 1	S	20 °C	
5571	Temp diff off dT contr 1	S	10 °C	
5572	On temp min dT contr 1	S	0°C	

Line No.	Programming	Access	Default value	Customer setting
5573	Sensor 1 controller 1	S	None	
5574	Sensor 2 controller 1	S	None	
5575	On time min dT contr 1	S	0 s	
5577	Pump/valve kick K21	S	On	
5580	Temp diff on dT contr 2	S	20 °C	
5581	Temp diff off dT contr 2	S	10 °C	
5582	On temp min dT contr 2	S	0°C	
5583	Sensor 1 controller 2	S	None	
5584	Sensor 2 controller 2	S	None	
5585	On time min dT contr 2	S	0 s	
5587	Pump/valve kick K22	S	On	
	Configuration			
5710	Heating circuit 1	С	Off	
5711	Cooling circuit 1	С	Off	
5715	Heating circuit 2	С	Off	
5721	Heating circuit 3	C	Off	
5730	DHW sensor	C	DHW sensor B3	
5731	DHW controlling element	C	Charging pump	
5732	Pump off change div valve	C	0 s	
5733	Delay pump off	C C	0.5	
5734	Basic position DHW div valve	S	Last request	
5736	DHW separate circuit	C C	Off	
5737	Opto action DHW div valve	s	Position on DHW	
5738	Midposition DHW div valve	S	Off	
5774	Ctrl hoiler nump/DHW valve	C C	All requests	
5840		C	Charging pump	
5841	External solar exchanger	C		
5870	Combi storage tank	C	No	
5890		C	Alarm output K10	
5891	Relay output 0X2	C C	DHW ctrl elem 03	
5892	Relay output QX3	C C	Boiler numn 01	
5931	Sensor input BX2	C C	None	
5932	Sensor input BX3	C	None	
5950	Eurotion input H1	C	None	
5951	Contact type H1	C C	NO	
5953	Voltage value 1 H1 (U1)	C C		
5954	Function value 1 H1 (F1)	C C	0	
5955	Voltage value 2 H1 (12)	C C	10 V	
5956	Function value 2 H1 (F2)	C C	1000	
5977	Function input H5	C C	None	
5978	Contact type H5	C C	NO	
6020	Function extension module 1	C C	None	
6021	Function extension module 2	c C	None	
6022	Function extension module 3	C C	None	
6024	Funct input EX21 module 1	C C	None	
6026	Funct input EX21 module 2	C.	None	
6028	Funct input EX21 module 3	C C	None	
6020	Relay output OX21 module 1		None	
6031	Relay output OX22 module 1		None	
0001	I windy output anzz mouule i		NULLE	

Line No.	Programming	Access	Default value	Customer setting
6032	Relay output QX23 module 1	С	None	
6033	Relay output QX21 module 2	С	None	
6034	Relay output QX22 module 2	С	None	
6035	Relay output QX23 module 2	С	None	
6036	Relay output QX21 module 3	С	None	
6037	Relay output QX22 module 3	С	None	
6038	Relay output QX23 module 3	С	None	
6040	Sensor input BX21 module 1	С	None	
6041	Sensor input BX22 module 1	С	None	
6042	Sensor input BX21 module 2	С	None	
6043	Sensor input BX22 module 2	С	None	
6044	Sensor input BX21 module 3	С	None	
6045	Sensor input BX22 module 3	С	None	
6046	Function input H2 module 1	С	None	
6047	Contact type H2 module 1	С	NO	
6049	Voltage value 1 H2 module 1(U1)	С	0 V	
6050	Function value 1 H2 module 1 (F1)	С	0	
6051	Voltage value 2 H2 module 1 (U2)	С	0 V	
6052	Function value 2 H2 module 1 (F2)	С	0	
6054	Function input H2 module 2	С	None	
6055	Contact type H2 module 2	с	NO	
6057	Voltage value 1 H2 module 2(U1)	с	0 V	
6058	Function value 1 H2 module 2 (F1)	C	0	
6059	Voltage value 2 H2 module 2 (U2)	C	0 V	
6060	Function value 2 H2 module 2 (F2)	c	0	
6062	Function input H2 module 3	C C	None	
6063	Contact type H2 module 3	C C	NO	
6065	Voltage value 1 H2 module 3(U1)	c	0 V	
6066	Function value 1 H2 module 3 (F1)	C C	0	
6067	Voltage value 2 H2 module 3 (U2)	c	0 V	
6068	Function value 2 H2 module 3 (F2)	C C	0	
6097	Sensor type collector	S	NTC	
6098	Readiustm collector sensor	s	0°C	
6100	Readjustm outside sensor	S	0°C	
6110	Time constant building	s	15 h	
6116	Const times compens consig	s	1 min	
6117	Compens centr T° consigne	s	5 °C	
6120	Frost protection plant	s	0ff	
6127	Pump/valve kick duration	s	30 s	
6200	Save sensors	C C	No	
6205	Reset to default parameter	<u> </u>	No	
6230		<u> </u>		
			60 kW : 2 80 kW : 3 100 kW : 4 120 kW : 5	
6231	Info 2 OEM	S		
	LPB system			
6600	Device address	С	1	
6601	Segment address	S	0	

Line No.	Programming	Access	Default value	Customer setting
6604	Bus power supply function	S	Automatically	
6605	Bus power supply state	S	Automatically	
6610	Display system messages	S	Yes	
6611	Syst messages alarm relay	S	No	
6620	Action changeover functions	S	System	
6621	Summer changeover	S	Locally	
6623	Optg mode changeover	S	Centrally	
6624	Manual source lock	S	Locally	
6625	DHW assignment	S	All HCs in system	
6631	Ext source in Eco mode	S	Off	
6640	Clock mode	С	Autonomously	
6650	Outside temp source	S	0	
	Fault			
6705	SW diagnostic code	E	0	
6706	Burn ctrl phase lockout pos	E	0	
6710	Reset alarm relay	С	No	
6740	Flow temp 1 alarm	S	120 min	
6741	Flow temp 2 alarm	S	120 min	
6742	Flow temp 3 alarm	s	120 min	
6743	Boiler temp alarm	S	120 min	
6745	DHW charging alarm	s	8 h	
6800	History 1	s	00.00	
6803	First code 1	0 0	00.00	
6805	SW diagnostic code 1	S	0	
6806	Burner control phase 1	S	0	
6810	History 2	S	00:00	
6813	Fror code 2	0 0	00.00	
6815	SW diagnostic code 2	0 0	0	
6816	Burner control phase 2	0 0	0	
6820	History 3	<u> </u>	00.00	
6823	Fror code 3	0 0	00.00	
6825	SW diagnostic code 3	0 0	0	
6826	Burner control phase 3	0 0	0	
6830	History 4	0	00.00	
6833	First code 4	<u> </u>	00.00	
6835	SW diagnostic code 4	0	0	
6836	Burner control phase 4	0	0	
6940	History 5	0	0	
6942	First and F	0	00.00	
0043 6945	Ellor code 5	<u> </u>	0	
0040 6946	Svy diagnostic code 5	<u> </u>	0	
0040	Burner control phase 5	<u> </u>	00.00	
0000		<u> </u>	00:00	
0853	Error code o	8	0	
0055			0	
0000	Burner control phase 6	S	U 00.00	
0000			00:00	
6863		S	0	
6865	SW diagnostic code /	S	0	
6866	Burner control phase 7	S	0	

Line No.	Programming	Access	Default value	Customer setting	
6870	History 8	S	00:00		
6873	Error code 8	S	0		
6875	SW diagnostic code 8	S	0		
6876	Burner control phase 8	S	0		
6880	History 9	S	00:00		
6883	Error code 9	S	0		
6885	SW diagnostic code 9	S	0		
6886	Burner control phase 9	S	0		
6890	History 10	S	00:00		
6893	Error code 10	S	0		
6895	SW diagnostic code 10	S	0		
6896	Burner control phase 10	S	0		
6900	History 11	S	00:00		
6903	Fror code 11	S	0		
6905	SW diagnostic code 11	S	0		
6906	Burner control phase 11	S	0		
6910	History 12	S	00:00		
6913	Froncode 12	s	0		
6915	SW diagnostic code 12	s	0		
6916	Burner control phase 12	S	0		
6920	History 13	s	00:00		
6923	Froncode 13	S	0		
6925	SW diagnostic code 13	S	0		
6926	Burner control phase 13	s	0		
6930	History 14	s	00:00		
6933	Fror code 14	S	0		
6935	SW diagnostic code 14	S	0		
6936	Burner control phase 14	S	0		
6940	History 15	S	00:00		
6943	Error code 15	S	0		
6945	SW diagnostic code 15	S	0		
6946	Burner control phase 15	S	0		
6950	History 16	S	00:00		
6953	Error code 16	S	0		
6955	SW diagnostic code 16	S	0		
6956	Burner control phase 16	S	0		
6960	History 17	S	00:00		
6963	Error code 17	S	0		
6965	SW diagnostic code 17	S	0		
6966	Burner control phase 17	S	0		
6970	History 18	S	00:00		
6973	Error code 18	S	0		
6975	SW diagnostic code 18	S	0		
6976	Burner control phase 18	S	0		
6980	History 19	S	00:00		
6983	Error code 19	S	0		
6985	SW diagnostic code 19	S	0		
6986	Burner control phase 19	S	0		
6990	History 20	S	00:00		

Line No.	Programming	Access	Default value	Customer setting				
6993	Error code 20	S	0					
6995	SW diagnostic code 20	S	0					
6996	Burner control phase 20	S	0					
	Service/special operation							
7040	Burner hours interval	S	1500 h					
7041	Burn hrs since maintenance	S	0 h					
7042	Burner start interval	S	9000					
7043	Burn starts since maint	S	0					
7044	Maintenance interval	S	24 months					
7045	Time since maintenance	S	0 months					
7050	Fan speed ionization current	S	0					
7051	Message ionization current	S	No					
7130	Chimney sweep function	E	Off					
7131	Burner output	E	Max heating load					
7140	Manual control	E	Off					
7143	Controller stop function	S	Off					
7145	Controller stop setpoint	S	0 %					
7146	Deaeration function	С	On					
7147	Type of venting	С	None					
7170	Telephone customer service	С	0					
	Input/output test			•				
7700	Relay test	С	No test					
7730	Outside temp B9	С	0 °C					
7750	DHW temp B3/B38	С	0 °C					
7760	Boiler temp B2	С	0°C					
7820	Sensor temp BX1	С	0°C					
7821	Sensor temp BX2	С	0°C					
7822	Sensor temp BX3	С	0 °C					
7823	Sensor temp BX4	С	0 °C					
7830	Sensor temp BX21 module 1	С	0 °C					
7831	Sensor temp BX22 module 1	С	0°C					
7832	Sensor temp BX21 module 2	С	0°C					
7833	Sensor temp BX22 module 2	С	0°C					
7834	Sensor temp BX21 module 3	С	0°C					
7835	Sensor temp BX22 module 3	С	0 °C					
7840	Voltage signal H1	С	0 V					
7841	Contact state H1	С	Open					
7845	Voltage signal H2 module 1	С	0 V					
7846	Contact state H2 module 1	С	Open					
7848	Voltage signal H2 module 2	С	0 V					
7849	Contact state H2 module 2	С	Open					
7851	Voltage signal H2 module 3	С	0 V					
7852	Contact state H2 module 3	С	Open					
7854	Voltage signal H3	С	0 V					
7855	Contact state H3	С	Open					
7860	Contact state H4	С	Open					
7862	Frequency H4	С	0					
7865	Contact state H5	С	Open					
7872	Contact state H6	С	Open					

Line No.	Programming	Access	Default value	Customer setting	
7874	Contact state H7	С	Open		
7950	Input EX21 module 1	С	0 V		
7951	Input EX21 module 2	С	0 V		
7952	Input EX21 module 3	С	0 V		
	State				
8000	State heating circuit 1	С	0		
8001	State heating circuit 2	С	0		
8002	State heating circuit 3	С	0		
8003	State DHW	С	0		
8005	State boiler	С	0		
8007	State solar	С	0		
8008	State solid fuel boiler	С	0		
8009	State burner	С	0		
8010	State buffer	С	0		
8011	State swimming pool	С	0		
	Diagnostics cascade				
8100	Priority source 1	С	0		
8101	State source 1	С	Missing		
8102	Priority source 2	С	0		
8103	State source 2	С	Missing		
8104	Priority source 3	С	0		
8105	State source 3	С	Missing		
8106	Priority source 4	С	0		
8107	State source 4	С	Missing		
8108	Priority source 5	С	0		
8109	State source 5	С	Missing		
8110	Priority source 6	С	0		
8111	State source 6	С	Missing		
8112	Priority source 7	С	0		
8113	State source 7	С	Missing		
8114	Priority source 8	С	0		
8115	State source 8	С	Missing		
8116	Priority source 9	С	0		
8117	State source 9	С	Missing		
8118	Priority source 10	С	0		
8119	State source 10	С	Missing		
8120	Priority source 11	С	0		
8121	State source 11	С	Missing		
8122	Priority source 12	С	0		
8123	State source 12	С	Missing		
8124	Priority source 13	С	0		
8125	State source 13	С	Missing		
8126	Priority source 14	С	0		
8127	State source 14	С	Missing		
8128	Priority source 15	С	0		
8129	State source 15	С	Missing		
8130	Priority source 16	С	0		
8131	State source 16	С	Missing		
8138	Cascade flow temp	С	0 °C		

Line No.	Programming	Access	Default value	Customer setting	
8139	Cascade flow temp setp	С	0 °C		
8140	Cascade return temp	С	0°C		
8141	Cascade return temp setp	С	0 °C		
8150	Source seq ch'over current	С	0 h		
	Diagnostics heat generation				
8304	Boiler pump Q1	S	Off		
8308	Boiler pump speed	S	0 %		
8309	Bypass pump speed	S	0 %		
8310	Boiler temp	E	0°C		
8311	Boiler setpoint	E	0°C		
8312	Boiler switching point	С	0 °C		
8313	Control sensor	С	0 °C		
8314	Boiler return temp	E	0 °C		
8315	Boiler return temp set	С	0 °C		
8316	Flue gas temp	E	0 °C		
8318	Flue gas temp max	E	0 °C		
8321	Primary exchanger temp	С	0 °C		
8323	Fan speed	E	0 tr/min		
8324	Set point fan	E	0 tr/min		
8325	Current fan control	С	0 %		
8326	Burner modulation	E	0 %		
8327	Water pressure	F	0		
8329	Ionization current	F F	0 µA		
8330	Hours run 1st stage	F	00:00:00 h		
8331	Start counter 1st stage	F F	0		
8338	Hours run heating mode	F	00:00:00 h		
8339	Hours run DHW	F	00:00:00 h		
8366	Boiler throughout	F			
8390	Current phase number	S	TNB		
8499	Collector pump 1	s S	0		
8501	Solar ctrl elem buffer	S	0		
8502	Solar ctrl elem swi pool	S	0		
8505	Speed collector pump 1	S	0 %		
8506	Speed solar nump ext exch	s	0 %		
8507	Speed solar pump buffer	s	0 %		
8508	Speed solar pump swi pool	s	0 %		
8510	Collector temp 1	C C	0 °C		
8511	Collector temp 1 max	C C	-28 °C		
8512	Collector temp 1 min	C C	350 °C		
8513	dt collector 1/DHW	C C	0 °C		
8514	dt collector 1/biffer	C C	0.00		
8515	dt collector 1/swimming pool		0.0		
8510	Solar flow temp		0.0		
8520	Solar roturn tomn		0°C		
8520					
8507					
8520			0 KVV/II 00.00.00 k		
9524			00.00.00 II		
0001					
0002			00:00:00 n		

Line No.	Programming	Access	Default value	Customer setting	
8560	Solid fuel boiler temp	С	0 °C		
8570	Hours run solid fuel boiler	E	00:00:00 h		
	Diagnostics consumers				
8700	Outside temp	E	0 °C		
8701	Outside temp min	E	50 °C		
8702	Outside temp max	E	-50 °C		
8703	Outside temp attenuated	С	0 °C		
8704	Outside temp composite	E	0 °C		
8730	Heating circuit pump 1	E	Off		
8731	Heat circ mix valv 1 open	E	Off		
8732	Heat circ mix valv 1 close	E	Off		
8735	Speed heating circuit pump 1	S	0 %		
8740	Room temp 1	С	20 °C		
8741	Room setpoint 1	С	20 °C		
8743	Flow temp 1	E	60 °C		
8744	Flow temp setpoint 1	E	60 °C		
8749	Room thermostat 1	С	No demand		
8760	Heating circuit pump 2	E	Off		
8761	Heat circ mix valv 2 open	E	Off		
8762	Heat circ mix valv 2 close	E	Off		
8765	Speed heating circuit pump 2	S	0 %		
8770	Room temp 2	C	20 °C		
8771	Room setpoint 2	C C	20 °C		
8773	Flow temp 2	F	60 °C		
8774	Flow temp setpoint 2	F	60 °C		
8779	Room thermostat 2	C -	No demand		
8790	Heating circuit pump 3	F	Off		
8791	HC mixing value 3 open	F	Off		
8792	HC mixing valve 3 closed	F	Off		
8795	Speed heating circuit pump 3	S	0 %		
8800	Room temp 3	C C	20 °C		
8801	Room setpoint 3	C	20 °C		
8803	Flow temp 3	F	60 °C		
8804	Flow temp setpoint 3	F	60 °C		
8809	Room thermostat 3	C	No demand		
8820		C C	Off		
8825	Speed DHW pump	S	0 %		
8826	Speed DHW interm circ pump	S	0 %		
8827	Speed inst DHW beater pump	S	0 %		
8830	DHW temp 1	C C	0°C		
8831	DHW temp setpoint	C C	55 °C		
8832	DHW temp 2	C C	0 °C		
8835	DHW circulation temp	c c	0 °C		
8836	DHW charging temp	C	0 °C		
8852	DHW consumption temp	C C	0°C		
8853	Instant WH setpoint	C C	0°C		
8860	DHW flow	C.	Ω I/min		
8875	Flow temp seto VK1	C C	5 °C		
8885	Flow temp setp VK2	C C	5 °C		

Line No.	Programming	Access	Default value	Customer setting
8895	Flow temp setp swimming pool	С	5 °C	
8900	Swimming pool temp	С	0 °C	
8901	Swimming pool setpoint	С	24 °C	
8930	Primary controller temp	С	0 °C	
8931	Primary controller set	С	0 °C	
8950	Common flow temp	С	0 °C	
8951	Common flow temp setp	С	0 °C	
8952	Common return temp	С	0°C	
8962	Common output setpoint	С	0 %	
8980	Buffer temp 1	С	0°C	
8981	Buffer setpoint	С	0°C	
8982	Buffer temp 2	С	0°C	
8983	Buffer temp 3	С	0 °C	
9005	Water pressure H1	С	0 bar	
9006	Water pressure H2	С	0 bar	
9009	Water pressure H3	С	0 bar	
9031	Relay output QX1	С	Off	
9032	Relay output QX2	С	Off	
9033	Relay output QX3	С	Off	
9034	Relay output QX4	С	Off	
9050	Relay output QX21 module 1	С	Off	
9051	Relay output QX22 module 1	С	Off	
9052	Relay output QX23 module 1	С	Off	
9053	Relay output QX21 module 2	С	Off	
9054	Relay output QX22 module 2	С	Off	
9055	Relay output QX23 module 2	С	Off	
9056	Relay output QX21 module 3	С	Off	
9057	Relay output QX22 module 3	С	Off	
9058	Relay output QX23 module 3	С	Off	
	Burner control			
9504	Required speed prepurging	S	40 kW : 3380 60 kW 3130 80 kW : 2450 100 kW : 2750 120 kW : 2590	
9512	Required speed ignition	S	40 kW : 3380 60 kW 3130 80 kW : 2450 100 kW : 2350 120 kW : 2480	
9524	Required speed LF	S	40 kW : 1780 60 kW 1920 80 kW : 1760 100 kW : 1750 120 kW : 1820	
9529	Required speed HF	S	40 kW : 6100 60 kW 7250 80 kW : 6380 100 kW : 6450 120 kW : 6950	
9650	Chimney drying	S	Off	
9651	Req speed chimney drying	S	500 tr/min	
9652	Duration chimney drying	S	10 min	

12. APPENDIX A

Data on products \leq 70 kW

Product reference						
Trade mark			YGNIS			
Models			40 kW	60 kW		
Code			082410	082411		
Nominal power	Prated	kW	40	56		
Seasonal energy efficiency class	Class		А	A		
Seasonal energy efficiency	η _s (PCS)	%	93	93		
Useful heat production				_		
At nominal power and in 80°C / 60°C	P ₄	kW	40,0	56,4		
regime	η_4 (PCS)	%	87,5	87,6		
At 30% nominal power and in 30°C return	P ₁	kW	13,4	18,9		
temperature regime	η ₁ (PCS)	%	97,6	98,0		
Auxiliary electricity consumption						
Under full load	elmax	kW	0,068	0,138		
Under partial load	elmin	kW	0,017	0,028		
In standby mode	P _{SB}	kW	0,003	0,003		
Other properties						
Heat loss	Pstby	kW	0,042	0,051		
Nitrogen oxide emissions	NOx (PCS)	mg/kWh	36	35		
Annual energy consumption	QHE	kWh	1	2		
Acoustic power	L _{wa}	dB	57	60		

Data on products $\leq 400 \text{ kW}$

Product reference	_				
Trade mark				YGNIS	
Models			80 kW	100 kW	120 kW
Nominal power	Prated	kW	90	96	120
Useful heat production					
At nominal power and in 90° C / 60° C regime	P ₄	kW	79,8	96,0	119,9
	η_4 (PCS)	%	87,3	87,8	87,8
At 30% nominal power and in 30°C return temperature	P ₁	kW	26,7	32,1	40,1
regime	η ₁ (PCS)	%	97,3	97,8	97,7
Auxiliary electricity consumption					
Under full load	elmax	kW	0,141	0,160	0,206
Under partial load	elmin	kW	0,027	0,030	0,030
In standby mode	P _{SB}	kW	0,003	0,003	0,003
Other properties					
Heat loss	Pstby	kW	0,087	0,094	0,104
Nitrogen oxide emissions	NOx (PCS)	mg/kWh	35	34	36



Fand

SATC ATLANTIC GUILLOT

1 route de Fleurville 01190 PONT DE VAUX Tél. : 03 51 42 70 03

N°Indigo 0 825 396 634

Fax : 03 85 51 59 30 www.atlantic-guillot.fr



Avenue du Château Jaco, 1 1410 WATERLOO Tel. : 02/357 28 28 Fax : 02/351 49 72 www.ygnis.be



Via Lombardia, 56 21040 CASTRONNO (VA) Tel.: 0332 895240 r.a. Fax : 0332 893063 *www.ygnis.it*

ATLANTIC IBERICA SAU

Servicio de Asistencia Técnica Ygnis Calle Molinot 59-61 Pol Ind Camí Ral 08860 CASTELLDEFELS (BARCELONA) Tel. : 902 45 45 22 Fax : 902 45 45 20 callcenter@groupe-atlantic.com repuestos@groupe-atlantic.com *www.ygnis.es*

Others countries, contact your local retailer



THERMOR SERVICES 17 rue Croix Fauchet - BP 46 45141 SAINT-JEAN-DE-LA-RUELLE Tel.:

www.thermor.fr

YGNIS AG

Wolhuserstrasse 31/33 6017 RUSWIL CH Tel.: +41 (0) 41 496 91 20 Fax : +41 (0) 41 496 91 21 Hotline : 0848 865 865 *www.ygnis.ch*



HAMWORTHY HEATING LIMITED

Customer Service Center Fleets Corner, POOLE, Dorset BH17 0HH Tel.: 0845 450 2865 Fax.: 01202 662522 service@hamworthy-heating.com www.hamworthy-heating.com The specifications of this equipment may be modified without prior instructions - Non contractual document - 00RNO0182-# (18.03.2016)